


FINO


Asennusohje

Montering / Installation / Инструкция по установке

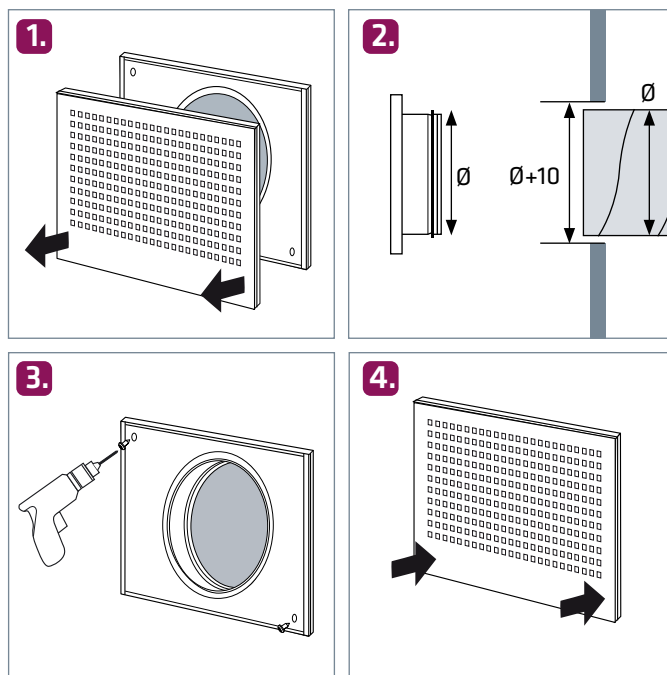


Huolto-ohje

Skötsel / Maintenance / Руководство по техническому

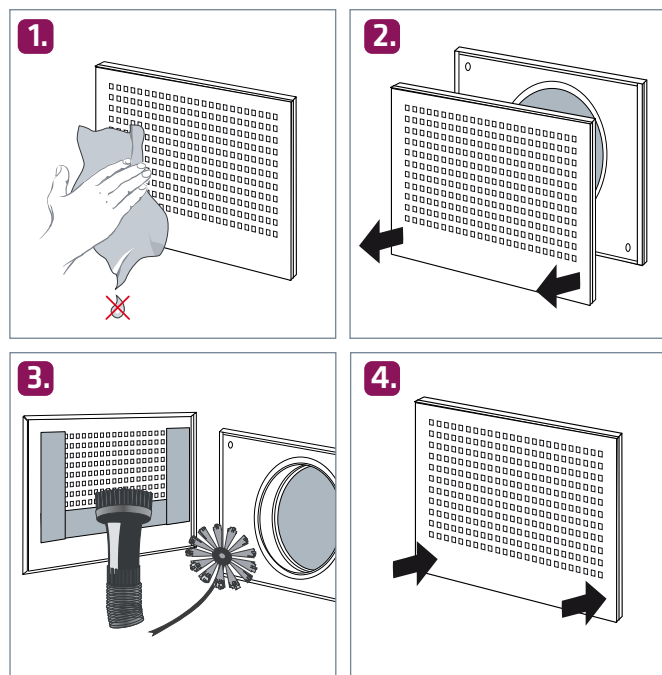


Säätöohje

Injustering / Adjustment / Инструкция по настройке

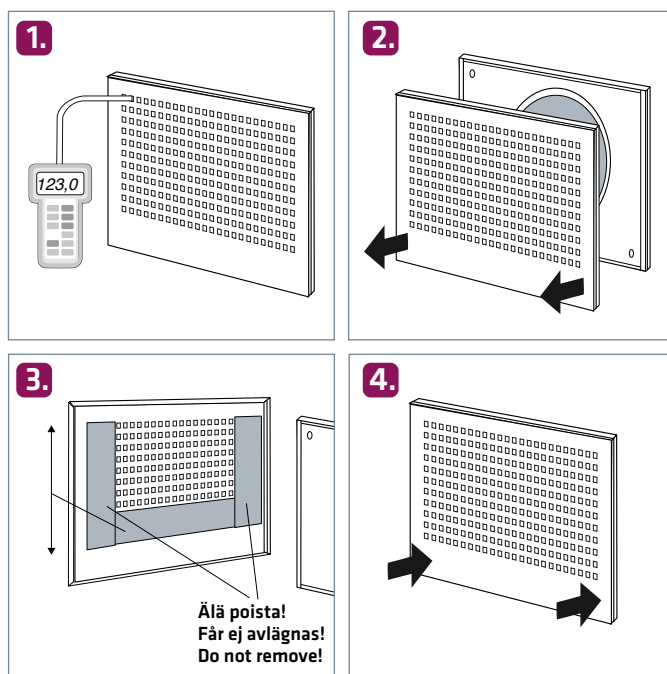

$q_v = k \cdot x \sqrt{\Delta P_m}$			$q_v = k \cdot x \sqrt{\Delta P_m}$		
FINO			FINO		
A	100	125	A	160	
	3,3	4,4		5,9	
Suljettu riviä Stängt rad Closed rows	1	4,1	Suljettu riviä Stängt rad Closed rows	2	5,4
	3	2,4		4	4,8
	5	1,9		8	3,8
	7	1,4		12	2,6
	9	1,0		16	1,5
	11	1,5		18	1,0
	13	1,0		20	0,5

 

4/2011 ->