 
 
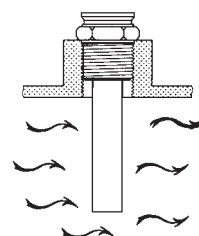 
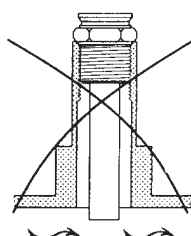 


Installation Instructions

 
ITC, ITL & ITD Immersion Thermostats

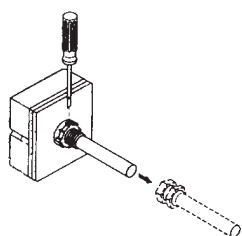





ITC

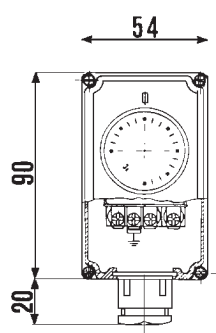


ITL

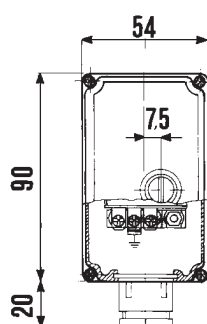


ITD

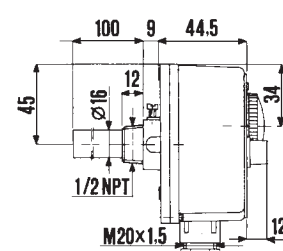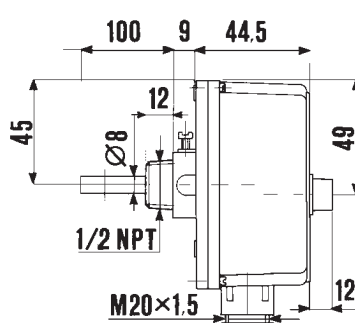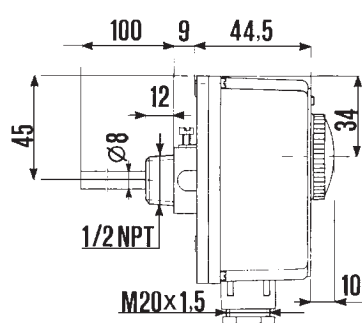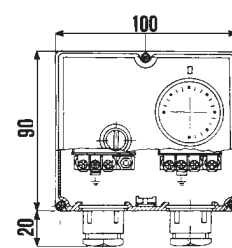    


Control

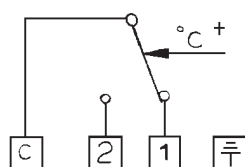 


Limit

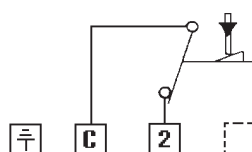 

Control

 

Limit

 

Installation Instructions

Thermostats	ITC Control	ITC Control (tamperproof)	ITL Limit	ITD Dual	ITD Dual
Order Codes	099-1057	099-1058	099-1059	099-1061	099-1062
Control Function (Thermal Reset)	●	●		●	
Limit Function (Manual Reset)			●	●	
Dual Control and Limit Function				●	
Temperature Range (°C)	0-90	0-90		0-90	0-90
Temperature Range (Limit)			90-110°C, Factory set to 90°C		90-110°C, Factory set to 80°C
Switching Differential	4 ± 1K	4 ± 1K	-	4 ± 1K	
Switch Configuration	SPDT	SPDT	SPST	SPDT (control), SPST (limit)	
Switch Voltage Rating	220/240 Vac				
Switch Current Rating	10 (2.5) A				
Max. Ambient Temperature (Head)	65°C	65°C	80°C	80°C	
Max. Medium Temperature	150°C	150°C	150°C	150°C	
Supplied with ½" BSP(m) x 100mm Pocket	●	●	●	●	
Dimensions of Thermostat Head (mm)	Wide	55	55	100	
	High	110	110	110	
	Deep	55.5	55.5	56.5	

Please note that on ITD model, code 099-1062, the temperature range of the limit thermostat is set at 80°C and cannot be altered.

This product complies with the following EC Directives:
Electro-Magnetic Compatibility Directive.
(EMC) (2004/108/EC)
Low Voltage Directive.
(LVD) (2006/95/EC)



Danfoss Randall can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss Randall reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed.

Danfoss Randall Ltd

Amphill Road
Bedford, MK42 9ER
Tel: (01234) 364621 Fax: (01234) 219705
Email: danfossrandall@danfoss.com
Website: www.danfoss-randall.co.uk

