


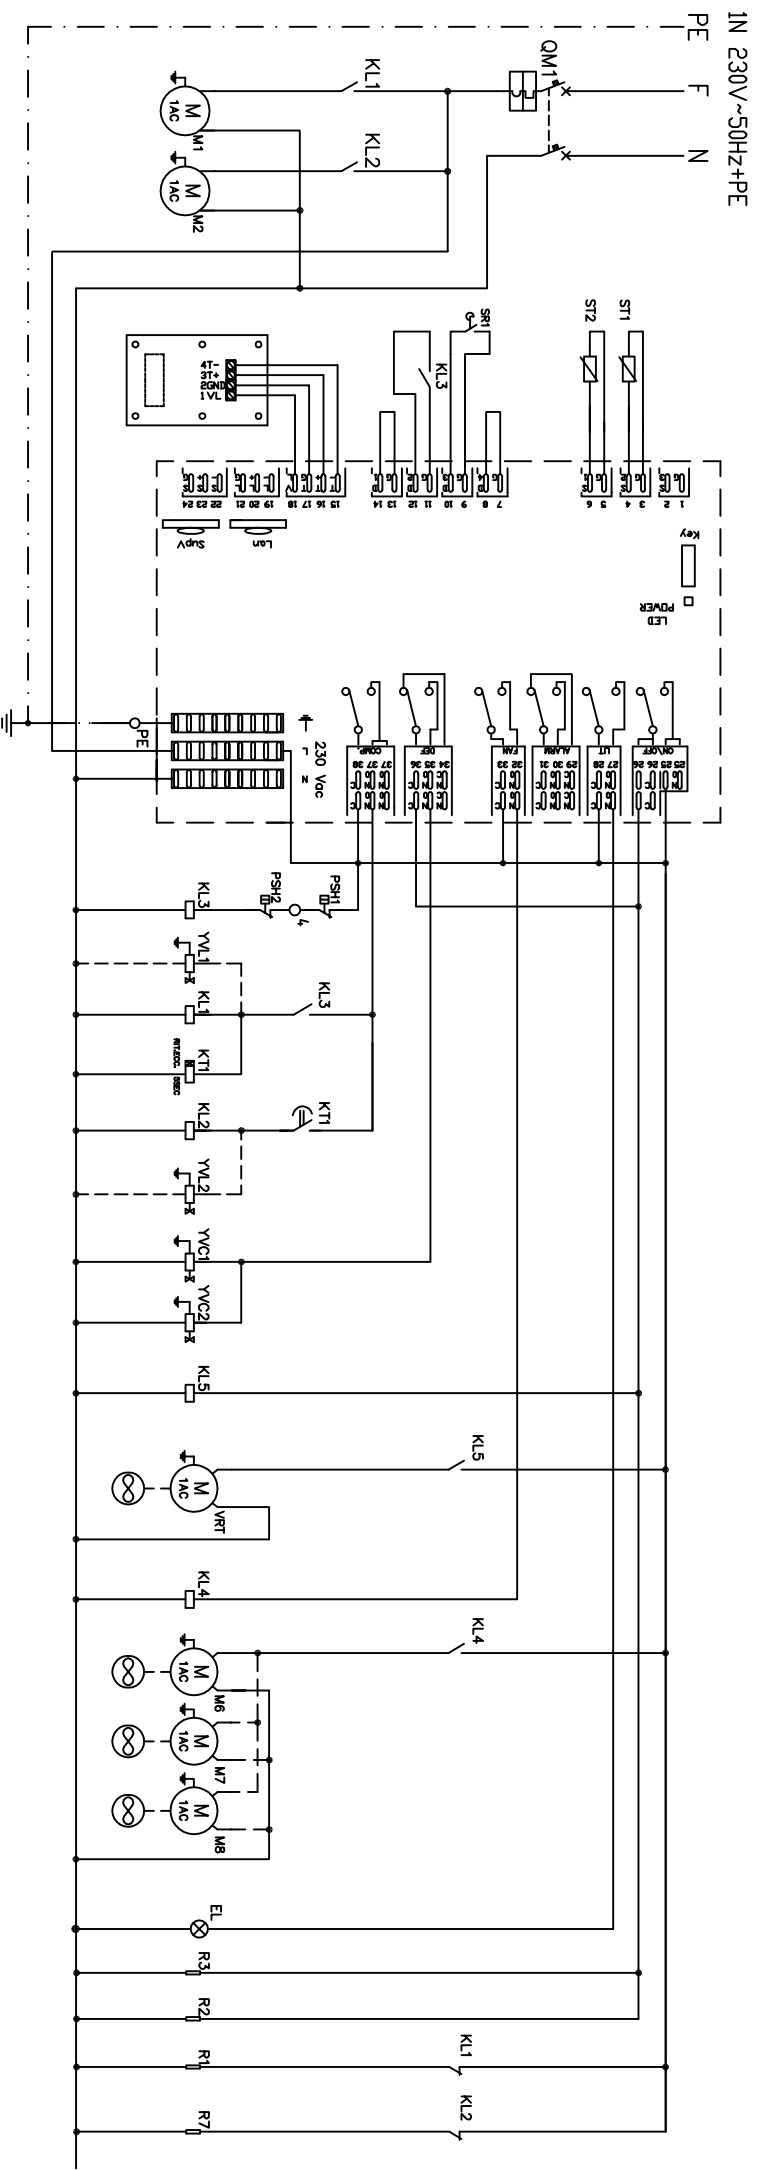

NB:YVL1-2 SOLO NEI MODELLI BT
NB:YVL1-2 ONLY BT MODELS

LEGENDA:

LEGEND:

F1=KRIMAN
M1-2=COMPRESSORI
M3-M4-M5=VENTOLE CONDENSATORE
M6-M7-M8=VENTOLE EVAPORATORE
R1-7=RESISTENZA PORTA
R2=RESISTENZA PORTA
R3=RESISTENZA SCARICO
R4-5-6=RESISTENZE DI SPRINAMENTO
YVL1-2=ELETTROVALVOLA SPRINAMENTO
YVC1-2=ELETTROVALVOLA SPRINAMENTO
PSH1-2=PRESSOSTATO DI MASSIMA
PSL=PRESSOSTATO DI MINIMA
BPV=REGOLATORE DI VELOCITA' VENT. COND.
PPH1-2-3=PRESSOSTATI VENTOLE CONDENSATORE
POM=PRESSOSTATO DIFFERENZIALE OLIO
VRI=VENTOLA RAFFREDDAMENTO TESTATA

ST1=SONDA SPRINAMENTO
ST2=SONDA TEMPERATURA
TKL1=CLICCON COMPRESSORE
X51=PRECA CONNETTORE SONDE
X21=SPINA CONNETTORE SONDE
X22=PRECA CONN. VENT. EVAP. E RES. DI SPRIN.
X23=SPINA CONN. VENT. EVAP. E RES. DI SPRIN.
X81=WORKSETTERA SONDE
X82=WORKSETTERA VENT. EVAP. E RES. DI SPRIN.
X83=WORKSETTERA SONDE SULL'EVAPORATORE
X84=WORK. VENT. EVAP. E RES. DI SPRIN. SULL'EVAP.
FV1=MONITOR DI TENSIONE
OM1=MAGNETOTERMICO GENERALE
KL1=RELE' COMPRESSORE 1
KL2=RELE' COMPRESSORE 2
KL3=RELE' PRESSOSTATI
KL4=RELE' VENTOLE EVAPORATORE
KT1=TEMPORIZZATORE COMPRESSORI
VEA=VENTOLA ESTRAZIONE ARIA
EL1=LUCE CELLA
SRI=MICRO PORTA

F1=KRIMAN
ST2=TEMPERATURE PROBE
TKL1=COMPRESSOR CLICCON
M3-M4-M5=CONDENSER FANS
M6-M7-M8=EVAPORATOR FANS
R1-7=CRANKCASE HEATER
R2=DISCHARGE HEATER
R3=DISCHARGE HEATER
R4-5-6=DEFROST HEATERS
YVL1-2=LIQUID ELECTROVALVE
YVC1-2=DEFROST ELECTROVALVE
X51=PROBES CONNECTOR PLUG
X21=PROBES CONNECTOR OUTLET
X22=CONN. OUTLET FOR EVAP. FANS AND DEFROST HEATERS
X81=TERMINAL BOARD FOR PROBES
X82=TERMINAL BOARD FOR EVAP. FANS AND DEFROST HEATERS
X83=TERMINAL BOARD FOR PROBES IN THE EVAP.
X84=TERM. BOARD EVAP. FANS AND DEFROST HEATERS IN THE EVAP.
FV1=VOLTAGE MONITOR
OM1=MAIN MAGNETOTHERMAL
KL1=COMPRESSOR 1 RELAY
KL2=COMPRESSOR 2 RELAY
KL3=PRESSURE SWITCHES RELAY
KL4=EVAPORATOR FANS RELAY
KT1=COMPRESSORS TIMER
VEA=AIR EXTRACTION FAN

ST1=DEFROST PROBE
ST2=TEMPERATURE PROBE
TKL1=COMPRESSOR CLICCON
M3-M4-M5=CONDENSER FANS
M6-M7-M8=EVAPORATOR FANS
R1-7=CRANKCASE HEATER
R2=DISCHARGE HEATER
R3=DISCHARGE HEATER
R4-5-6=DEFROST HEATERS
YVL1-2=LIQUID ELECTROVALVE
YVC1-2=DEFROST ELECTROVALVE
X51=PROBES CONNECTOR PLUG
X21=PROBES CONNECTOR OUTLET
X22=CONN. OUTLET FOR EVAP. FANS AND DEFROST HEATERS
X81=TERMINAL BOARD FOR PROBES
X82=TERMINAL BOARD FOR EVAP. FANS AND DEFROST HEATERS
X83=TERMINAL BOARD FOR PROBES IN THE EVAP.
X84=TERM. BOARD EVAP. FANS AND DEFROST HEATERS IN THE EVAP.
FV1=VOLTAGE MONITOR
OM1=MAIN MAGNETOTHERMAL
KL1=COMPRESSOR 1 RELAY
KL2=COMPRESSOR 2 RELAY
KL3=PRESSURE SWITCHES RELAY
KL4=EVAPORATOR FANS RELAY
KT1=COMPRESSORS TIMER
VEA=AIR EXTRACTION FAN

EFR21B04002
REV.03