



Installation Guide


Manual Hand Wheel 013G5009

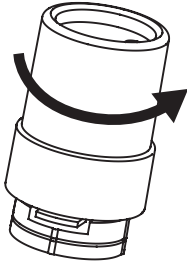


1. Make sure the hand wheel is fully open.

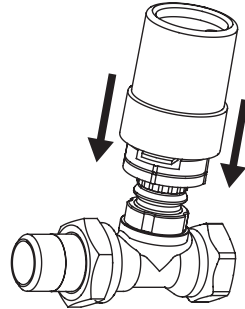


2. Install the hand wheel on the valve along with the guide slots.

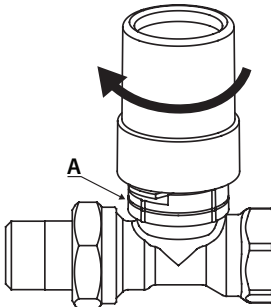


3. Turn the hand wheel clockwise until the bottom reaches the indicator line (A).

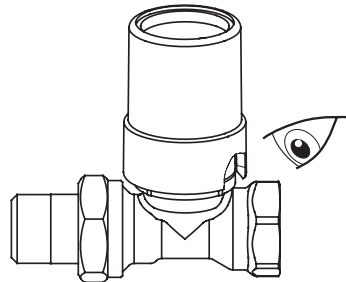

4. Visually check that the bottom is aligned with the indicator line.

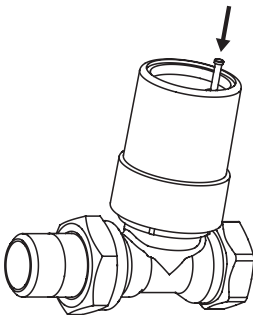

5. Place the spindle inside the handle.

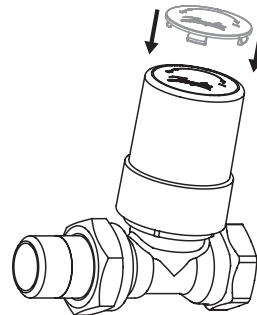

6. Press on the cover cap.

Installation Guide Manual Hand Wheel 013G5009
