
 
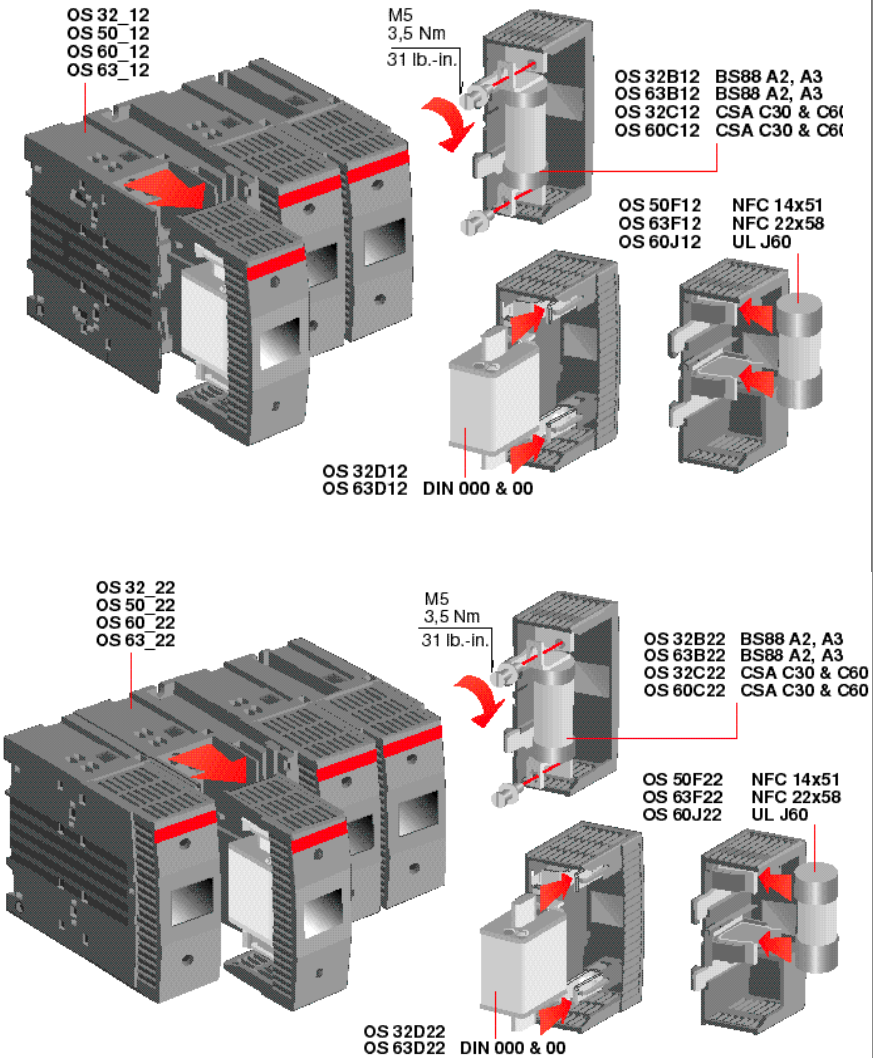

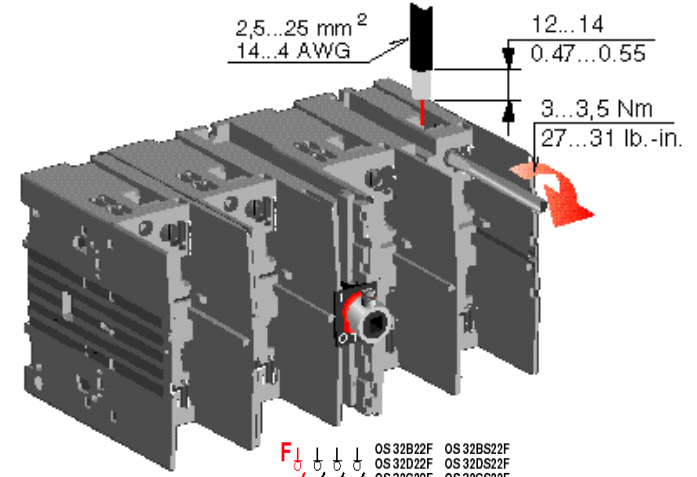


Low Voltage Apparatus  
 P.O. Box 622 Telephone +358 10 224 000  
 FIN-65101 Vaasa Telefax +358 10 224 5708  
 Finland

ABB Control Oy

# OS 30\_-OS63\_

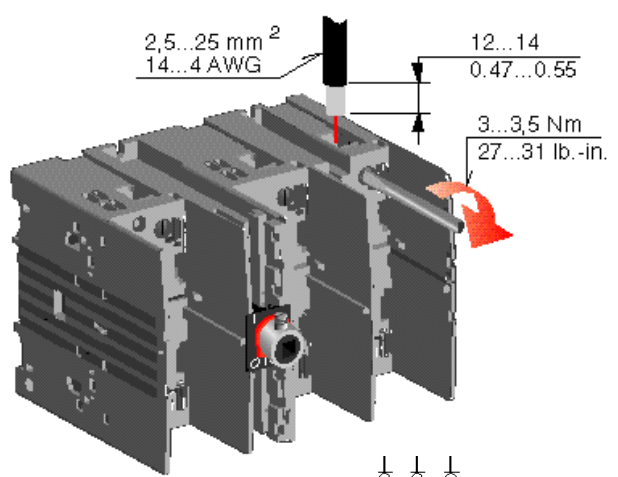

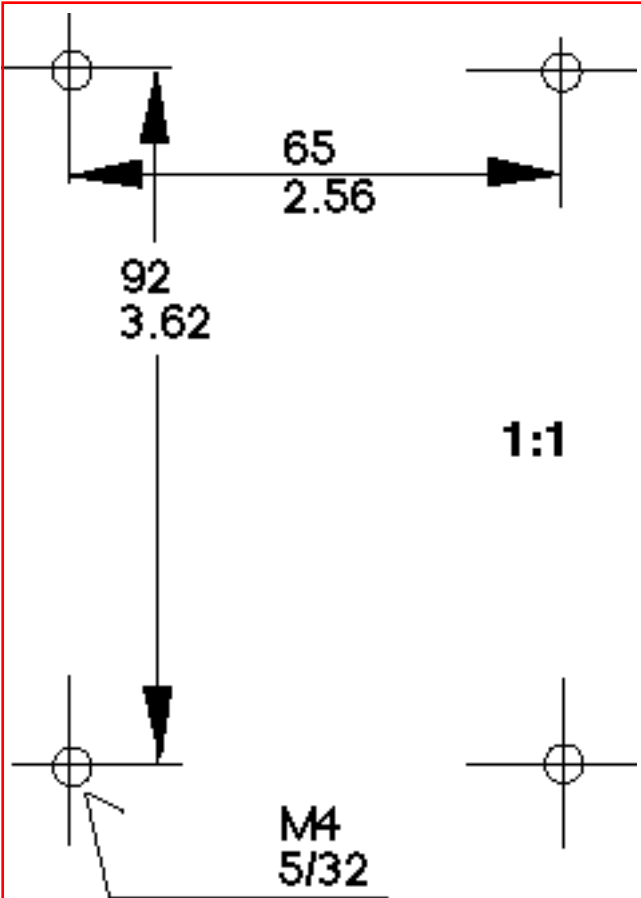

- |                |  |            |             |
|----------------|--|------------|-------------|
| F <sub>1</sub> |  | OS 32B22F  | OS 32BS22F  |
|                |  | OS 32D22F  | OS 32DS22F  |
|                |  | OS 32C22F  | OS 32CS22F  |
|                |  | OS 50F22F  | OS 50FS22F  |
|                |  | OS 60J22F  | OS 60JS22F  |
|                |  | OS 60C22F  | OS 60CS22F  |
|                |  | OS 63D22F  | OS 63DS22F  |
|                |  | OS 63B22F  | OS 63BS22F  |
|                |  | OS 63F22F  | OS 63FS22F  |
|                |  |            |             |
| N1             |  | OS 32B22N1 | OS 32BS22N1 |
|                |  | OS 32D22N1 | OS 32DS22N1 |
|                |  | OS 32C22N1 | OS 32CS22N1 |
|                |  | OS 50F22N1 | OS 50FS22N1 |
|                |  | OS 60J22N1 | OS 60JS22N1 |
|                |  | OS 60C22N1 | OS 60CS22N1 |
|                |  | OS 63D22N1 | OS 63DS22N1 |
|                |  | OS 63B22N1 | OS 63BS22N1 |
|                |  | OS 63F22N1 | OS 63FS22N1 |
|                |  |            |             |

