


## SOLDER TYPE ACCESS VALVES 1/4"

### STRAIGHT SOLDER WITH TUBE EXTENSION


<b>MV-AVX-6-050</b>	1/4" MFL (+ core & cap) x ODS 6 mm (ext. length 50 mm).
<b>MV-AVX-6-100</b>	1/4" MFL (+ core & cap) x ODS 6 mm (ext. length 100 mm).

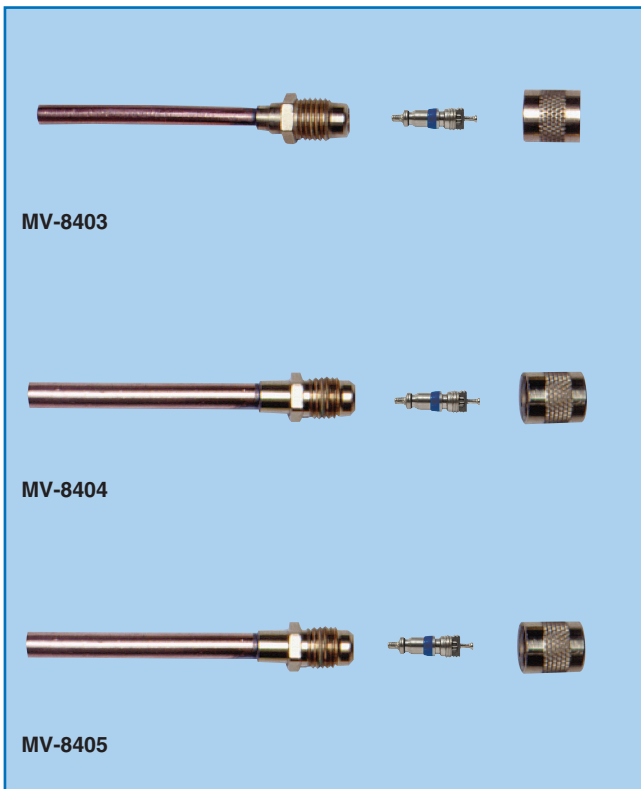

### ECONOMY LINE SERVICE VALVES

<b>MV-8408</b>	1/4" MFL (+ core & cap) x 1/8" ODS extended copper tube.
<b>MV-8403</b>	1/4" MFL (+ core & cap) x 3/16" ODS extended copper tube.
<b>MV-8404</b>	1/4" MFL (+ core & cap) x 1/4" ODS extended copper tube.
<b>MV-8405</b>	1/4" MFL (+ core & cap) x 5/16" ODS extended copper tube.
<b>MV-8406</b>	1/4" MFL (+ core & cap) x 3/8" ODS extended copper tube.

- These service valves are identical to the premium service valves (page 119) but with standard cap
- **USUAL INSTALLATION INSTRUCTIONS:**
  - 1- Remove cap and core.
  - 2- Insert tubing or body into the corresponding size line or hole and braze into place.
  - 3- Replace core, tighten, evacuate and charge the system. replace cap.

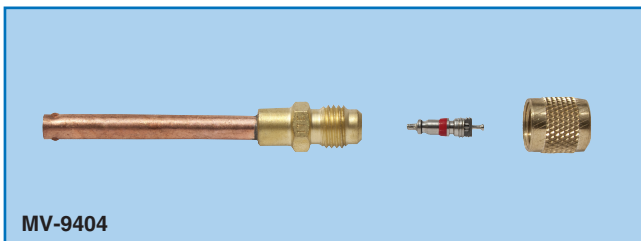

### ECONOMY LINE SERVICE VALVES WITH STOP

<b>MV-9404</b>	1/4" MFL (+ core & cap) x 1/4" ODS extended copper tube with stop.
<b>MV-94/G</b>	Spare gasket for <b>MV-9404</b> .