




**C-6906**

**C-6908**

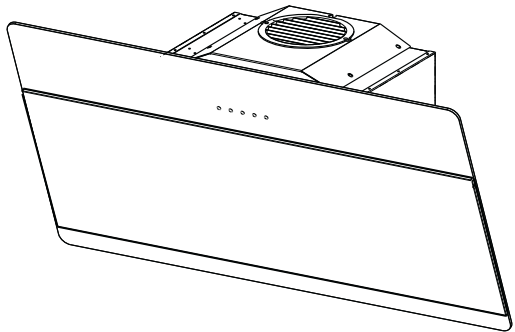

**Instructions Manual**

**Käyttöohje**

# INDEX

EN

|                                       |    |
|---------------------------------------|----|
| RECOMMENDATIONS AND SUGGESTIONS ..... | 3  |
| CHARACTERISTICS .....                 | 4  |
| INSTALLATION.....                     | 6  |
| USE .....                             | 9  |
| MAINTENANCE .....                     | 10 |

# SISÄLTÖ

FI


|                             |    |
|-----------------------------|----|
| OHJEET JA SUOSITUKSET ..... | 12 |
| MITAT JA OSAT .....         | 13 |
| ASENNUS .....               | 15 |
| KÄYTTÖ .....                | 18 |
| HUOLTO .....                | 19 |

# RECOMMENDATIONS AND SUGGESTIONS

⚠ The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.

## INSTALLATION

- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- The minimum safety distance between the cooker top and the extractor hood is 650 mm (some models can be installed at a lower height, please refer to the paragraphs on working dimensions and installation).
- Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.
- For Class I appliances, check that the domestic power supply guarantees adequate earthing. Connect the extractor to the exhaust flue through a pipe of minimum diameter 120 mm. The route of the flue must be as short as possible.
- Do not connect the extractor hood to exhaust ducts carrying combustion fumes (boilers, fireplaces, etc.).
- If the extractor is used in conjunction with non-electrical appliances (e.g. gas burning appliances), a sufficient degree of aeration must be guaranteed in the room in order to prevent the backflow of exhaust gas. The kitchen must have an opening communicating directly with the open air in order to guarantee the entry of clean air. When the cooker hood is used in conjunction with appliances supplied with energy other than electric, the negative pressure in the room must not exceed 0,04 mbar to prevent fumes being drawn back into the room by the cooker hood.
- In the event of damage to the power cable, it must be replaced by the manufacturer or by the technical service department, in order to prevent any risks.
- If the instructions for installation for the gas hob specify a greater distance specified above, this has to be taken into account. Regulations concerning the discharge of air have to be fulfilled.

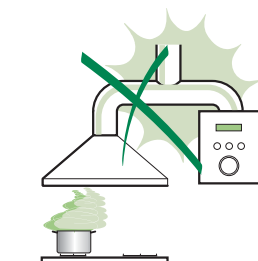


## USE

- The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells.
- Never use the hood for purposes other than for which it has been designed.
- Never leave high naked flames under the hood when it is in operation.
- Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.
- Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames.
- Do not flambé under the range hood; risk of fire.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- "CAUTION: Accessible parts may become hot when used with cooking appliances."

## MAINTENANCE

- Switch off or unplug the appliance from the mains supply before carrying out any maintenance work.
- Clean and/or replace the Filters after the specified time period (Fire hazard).
- Clean the hood using a damp cloth and a neutral liquid detergent.

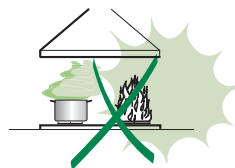

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.


# CHARACTERISTICS

## Components




| Ref. | Q.ty | Product Components                                         |
|------|------|------------------------------------------------------------|
| 1    | 1    | Hood Body, complete with: Controls, Light, Blower, Filters |
| 2.1  | 1    | Upper Section (optional)                                   |
| 2.2  | 1    | Lower Section (optional)                                   |
| 8    | 1    | Directional Air Outlet grille                              |
| 9    | 1    | Flange (optional)                                          |
| 15   | 1    | Angle iron (optional)                                      |
| 16   | 1    | Filter cover                                               |

| Ref.  | Q.ty | Installation Components                          |
|-------|------|--------------------------------------------------|
| 7.2.1 | 2    | Upper Chimney Section Fixing Brackets (optional) |
| 11    | 6    | Wall Plugs ( 4 optional )                        |
| 11a   | 2    | Wall Plugs SB 12/10                              |
| 12a   | 6    | Screws 4,2 x 44,4 ( 4 optional )                 |
| 12c   | 10   | Screws 2,9 x 6,5 ( 6 optional )                  |
| 12d   | 6    | Screws 2,9 x 9,5 ( 4 optional )                  |

| Q.ty | Documentation      |
|------|--------------------|
| 1    | Instruction Manual |

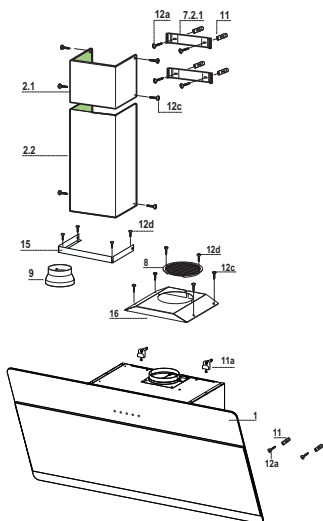


## Dimensions

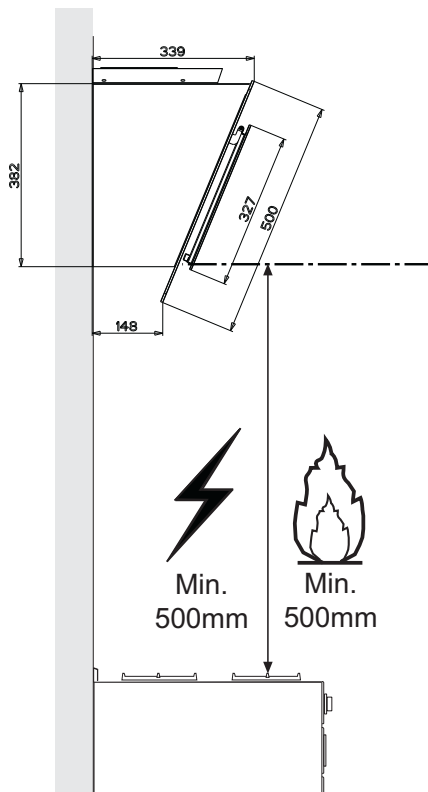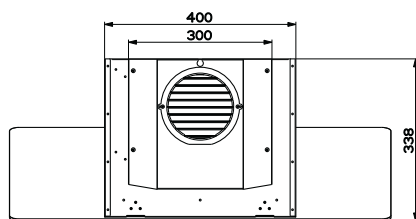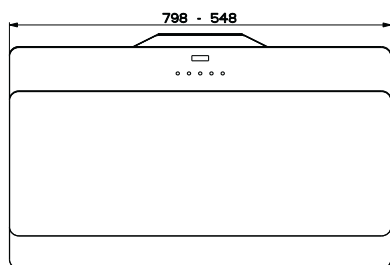

# INSTALLATION

## Wall drilling and bracket fixing

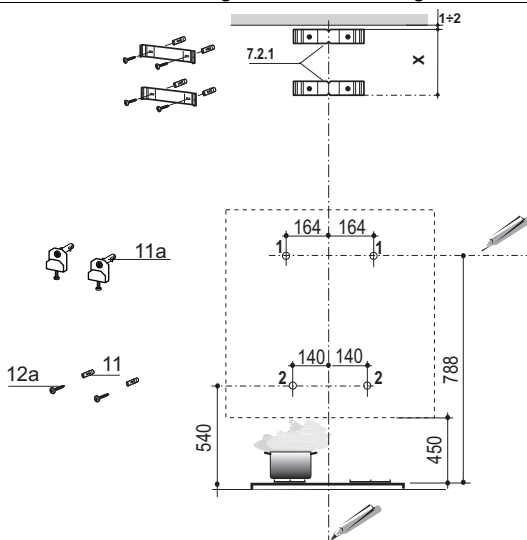

As a first step, proceed with the following drawings:


- a vertical line up to the ceiling or up to the upper limit, at the centre of the area in which the hood is to be fitted;
- a horizontal line at a minimum 788 mm above the cooker top.
- Mark a point **(1)** on the horizontal line, 164 mm to the right of the vertical reference line.
- Repeat this operation on the other side, checking that the two marks are levelled.
- Mark a reference point **(2)** as indicated at 140 mm from the vertical reference line and 540 mm above the cooker top.
- Repeat this operation on the other side, checking that the two marks are levelled.
- Drill at the marked points **(1)**, using a  $\varnothing$  12 mm drill bit.
- Drill at the marked points **(2)** using a  $\varnothing$  8 mm drill bit.
- Insert the bracket plugs **11a** into the holes **(1)** and tighten the screws.
- Insert plug **11** into holes **(2)**.

### To install a decorative chimney ( optional )

- Place bracket **7.2.1** on the wall, about 1-2 mm from the ceiling or from the upper limit, aligning the centre (notch) with the vertical reference line.
- Mark the wall at the centres of the bracket holes.
- Place the bracket **7.2.1** on the wall at X mm below the first bracket (X = height of the upper chimney section), aligning the centre (notch) with the vertical line.
- Mark the wall at the centres of the bracket holes.
- Drill  $\varnothing$  8 mm holes at all the marked centre points.
- Insert the wall plugs **11** in the holes.
- Fix the brackets using the **12a** screws (4,2 x 44,4) supplied with the hood.

## Fitting the hood body

- Open the doors/the door (See section Open Panels).
- Remove the Metal grease filters using the handles provided.
- Adjust the two screws **Vr**, in the brackets **11a**, so that they are at the start of their travel.
- Hook the hood body to the two brackets **11a**.
- From the inside of the hood body, turn screws **Vr** to level the hood body itself.
- Fasten the safety screw **12a**.
- Close the doors/the door again.

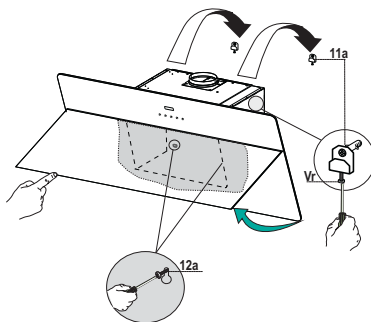


## Connections

### DUCTED VERSION AIR EXHAUST SYSTEM

When installing the ducted version, connect the hood to the chimney using either a rigid pipe  $\varnothing$  160 or 125 mm, the choice of which is left to the installer.



- To install a  $\varnothing$  125 mm air exhaust connection, insert the reducer flange **9** on the hood body outlet.
- Fix the pipe in position using sufficient pipe clamps (not supplied).
- Remove possible charcoal filters.

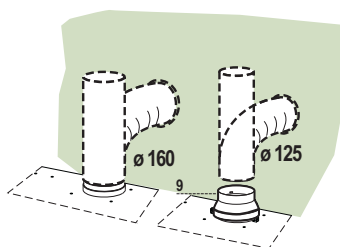

## Recirculation Version Air Outlet


To install the Recirculation Version of the hood, the optional Activated charcoal cartridge kit must be purchased.

- Screw the filter cover onto the air outlet, using four screws **12c** (2,9 x 12,5).
- Fix the directional grille **8** on the recirculation air outlet using the 2 screws **12d** (2,9 x 9,5) provided.

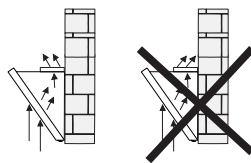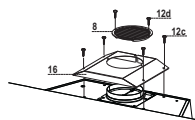

## ELECTRICAL CONNECTION

- Connect the hood to the mains through a two-pole switch having a contact gap of at least 3 mm.
- Remove the grease filters (see paragraph Maintenance) being sure that the connector of the feeding cable is correctly inserted in the socket placed on the side of the fan.

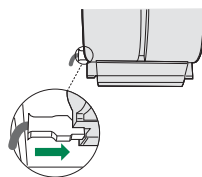

## Flue assembly

The chimney can only be installed with exhausting hood



- Fasten the angle iron **15** to the hood canopy using the screws **12d** (2,9 x 9,5) provided.

### Upper exhaust flue


- Slightly widen the two sides of the upper flue and hook them behind the brackets **7.2.1**, making sure that they are well seated.
- Secure the sides to the brackets using the 4 screws **12c** (2,9 x 6,5) supplied.

### Lower exhaust flue

- Slightly widen the two sides of the flue and hook them between the upper flue and the wall, making sure that they are well seated.
- Fix the lower part laterally to the hood body using the 2 screws **12c** (2,9 x 6,5) supplied.

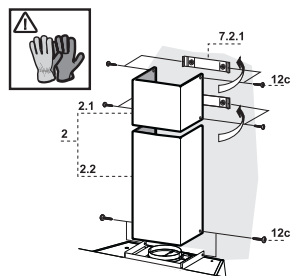

Control panel

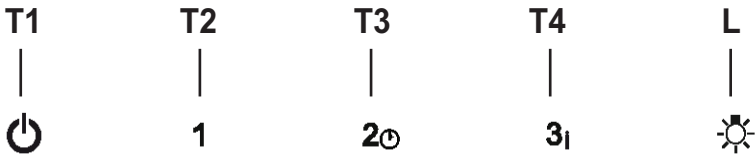

| Button | Function                                                                                                                                                                                                                             |                                                                                       |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| T1     | Turns the Motor off.                                                                                                                                                                                                                 | -                                                                                     |
| T2     | Turns the motor on at speed one                                                                                                                                                                                                      | Buttons <b>T1+T2</b> are on.                                                          |
| T3     | Turns the Motor on at speed two                                                                                                                                                                                                      | Buttons <b>T1+T3</b> are on.                                                          |
|        | Press and hold for 2 seconds to enable shutdown with a 30 minute delay (Motor+Lights). It is possible to change the operating speed when this function is enabled.                                                                   | The respective buttons <b>T1+</b> ( <b>T2</b> or <b>T3</b> or <b>T4</b> ) will flash. |
| T4     | Turns the Motor on at speed three                                                                                                                                                                                                    | Buttons <b>T1+T4</b> are on.                                                          |
|        | Press and hold for 2 seconds to activate Intensive speed, which is timed to run for 10 minutes. At the end of this time it will automatically return to the speed set before. Suitable to deal with maximum levels of cooking fumes. | The button flashes.                                                                   |
| L      | Turns the Lighting System on and off at maximum intensity.                                                                                                                                                                           | Button on                                                                             |
|        | Press and hold for 2 seconds to turn the Lighting system on and off at reduced intensity.                                                                                                                                            | Button on                                                                             |


# MAINTENANCE

---

## Opening Panel

---

- Open the Panel by pulling it.
- The panel can be locked in any position.
- Clean the outside with a damp cloth and neutral detergent.
- Clean the inside using a damp cloth and neutral detergent; do not use wet cloths or sponges, or jets of water; do not use abrasive substances.

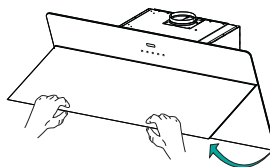


## Grease filters

---

### CLEANING METAL SELF- SUPPORTING GREASE FILTERS

- The filters must be cleaned every 2 months of operation, or more frequently for particularly heavy usage, and can be washed in a dishwasher.
- Pull the comfort panels to open them.
- Remove the filters one by one pushing them towards the back side of the hood unit and simultaneously pulling downwards.
- Any kind of bending of the filters has to be avoided when washing them. Before fitting them again into the hood make sure that they are completely dry. (The colour of the filter surface may change throughout the time but this has no influence to the filter efficiency).
- When fitting the filters into the hood pay attention that they are mounted in correct position the handle facing outwards.
- Close the comfort panel.

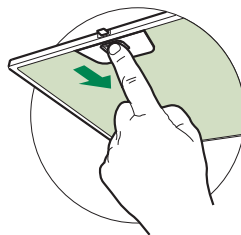

## Activated charcoal filter (Recirculation version)


These filters are not washable and cannot be regenerated, and must be replaced approximately every 4 months of operation, or more frequently with heavy usage.

### REPLACING THE ACTIVATED CHARCOAL FILTER

- Open the comfort panels pulling them downwards.
- Remove the metal grease filters
- Remove the saturated activated charcoal filter as shown (A).
- Fit the new filters (B).

**Art.** 90254 Charcoal filter HS-29

- Replace the metal grease filters.
- Close the comfort panels.

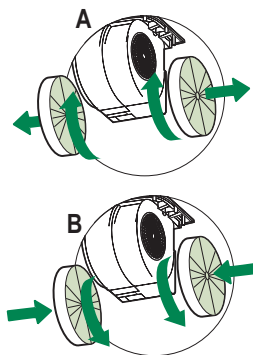


## Lighting

### LIGHT REPLACEMENT

#### 20 W halogen light (G4 Base)

- Remove the snap-on lamp cover by levering it from under the metal ring, supporting it with one hand.
- Remove the halogen lamp from the lamp holder by pulling gently.
- Replace the lamp with a new one of the same type, making sure that you insert the two pins properly into the housings on the lamp holder.
- Replace the snap-on lamp cover.

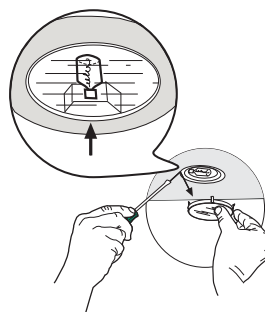

# OHJEET JA SUOSITUKSET

⚠ Nämä käyttöohjeet koskevat useita tuuletintyyppiä. On mahdollista, että teksti käsittelee yksityiskohtia, jotka eivät kuulu valitsemaanne tuulettimeen.

## ASENNUS



- Valmistaja ei vastaa virheellisestä tai huolimattomasta asennuksesta aiheutuvista vahingoista.
- Pienin sallittu turvaetäisyys liesitason ja liesikuvun välillä on 650 mm (jotkut mallit voidaan asentaa alemmas, katso mittoja ja asennusta koskevia kappaleita).
- Tarkista, että käytettävän sähköverkon jännite vastaa liesikuvun sisäpuolella olevaan arvokilpeen merkittyä jännitettä.
- Kytke laite vain maadoitettuun pistorasiaan.
- Yhdistä liesituuletin homiin putkella, jonka halkaisija on vähintään 120 mm. Homiin menevän putken on oltava mahdollisimman lyhyt.
- Älä yhdistä liesituuletinta savuhomiin (lämmityskattilat, tulisijat, jne.).
- Mikäli liesituuletinta käytetään muiden kuin sähkölaitteiden (esim. kaasuhella) yhteydessä, on huolehdittava työskentelytilan riittävästä tuuletuksesta, etteivät poistettavat kaasut pääse virtaamaan takaisin työskentelytilaan. Keittäessä on oltava ilmanvaihtoaukko puhdasta tuloilmaa varten. Käyttö tapahtuu oikein ja vaaratta kun tilan enimmäispaine ei ylitä arvoa 0,04 mBar.
- Jos virtajohto vahingoittuu, sen saa vaihtaa vain valmistaja tai tekninen huoltopalvelu, näin vältetään kaikki riskit.
- Jos kaasukäyttöisen keittolaitteen asennusohjeet määräävät, että etäisyyden on oltava yllä mainittua suurempi, ohjeita on noudatettava. Kaikkia ilmanpoistoa koskevia määräyksiä on noudatettava.

## KÄYTTÖ

- Liesituuletin on tarkoitettu vain kotitalouskäyttöön.
- Älä koskaan käytä liesituuletinta muuhun tarkoitukseen kuin, mihin se on suunniteltu.
- Älä koskaan jätä avotulta liesituulettimen alle liesituulettimen ollessa käynnissä.
- Säädä liekin teho siten, että liekki kohdistuu vain astian pohjaan eikä sen reunalle.
- Syviä paistinpannuja on paiston aikana koko ajan pidettävä silmällä, sillä ylikuumentunut öljy voi leimata tullen.
- Lapset tai henkilöt, joita ei ole opastettu laitteen oikeaan käyttöön, eivät saa käyttää liesituuletinta.
- Liesikuvun alla ei saa valmistaa liekitettäviä ruokia: tulipalon vaara.
- Laitetta eivät saa käyttää henkilöt (lapset mukaan lukien), joiden psyykinen, aistien tai mielen terveys on heikentynyt, tai henkilöt, joilla ei ole tarpeellista kokemusta tai taitoa, ellei heidän turvallisuudestaan vastaa-va henkilö ole valmentanut heitä laitteen käyttöön tai valvo sitä.
- Valvo, etteivät lapset pääse leikkimään laitteella.
- "HUOMIO: Kosketettavissa olevat osat voivat tulla hyvin kuumiksi jos niitä käytetään keittolaitteiden kanssa."

## HUOLTO

- Sulje laite tai irrota sen pistoke pistorasiasta ennen hoitoa.
- Puhdista ja/tai vaihda suodattimet annetun ajan kuluttua (Tulipalovaara).
- Puhdista liesituuletin kostealla kankaalla ja miedolla, nestemäisellä pesuaineella.

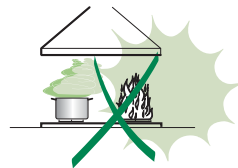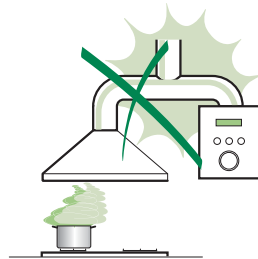





Symboli  , joka on merkitty tuotteeseen tai sen pakkaukseen, osoittaa, että tätä tuotetta ei saa käsitellä talousjätteenä. Tuote on sen sijaan luovutettava sopivaan sähkö- ja elektroniikkalaitteiden kierrätyksestä huolehtivaan keräyspisteeseen. Tämän tuotteen asianmukaisen hävittämisen varmistamisella autetaan estämään sen mahdolliset ympäristöön ja terveyteen kohdistuvat haittavaikutukset, joita voi aiheutua muussa tapauksessa tämän tuotteen epäasianmukaisesta jätekäsittelystä. Tarkempia tietoja tämän tuotteen kierrättämisestä saa paikallisesta kunnantou-  
mistosta, talousjätehuoltopalvelusta tai liikkeestä, josta tuote on ostettu.

# MITAT JA OSAT


## Osat

| Viite | Lkm          | Tuotteen osat                                                                      |
|-------|--------------|------------------------------------------------------------------------------------|
| 1     | 1            | Liesituulettimen runko, johon kuuluu: Kytkimet, valo, tuuletusyksikkö, suodattimet |
| 2.1   | 1            | Ylähormi (lisävaruste)                                                             |
| 2.2   | 1            | Alahormi (lisävaruste)                                                             |
| 8     | 1            | Ilman ulostulo ritilä                                                              |
| 9     | 1            | Sovituslaippa Ø 150-120 mm                                                         |
| 15    | 1            | Kulmaosa (lisävaruste)                                                             |
| 16    | 1            | Suodatuskansi                                                                      |
| Viite | Lkm          | Asennuksen osat                                                                    |
| 7.2.1 | 2            | Ylähormin kiinnitystuet (lisävaruste)                                              |
| 11    | 6            | Ruuvitulpat ( 4 lisävaruste)                                                       |
| 11a   | 2            | Ruuvitulpat SB 12/10                                                               |
| 12a   | 6            | Ruuvit 4,2 x 44,4 ( 4 lisävaruste)                                                 |
| 12c   | 10           | Ruuvit 2,9 x 6,5 ( 6 lisävaruste)                                                  |
| 12d   | 6            | Ruuvit 2,9 x 9,5 ( 4 lisävaruste)                                                  |
| Lkm   | Asiakirjat   |                                                                                    |
| 1     | Käyttöohjeet |                                                                                    |

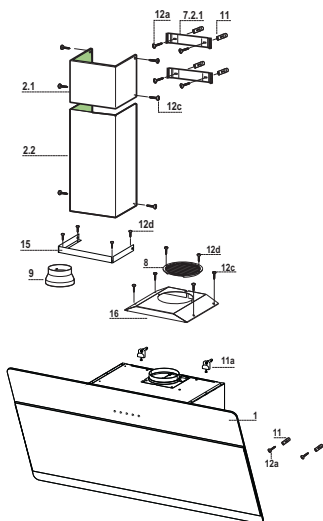

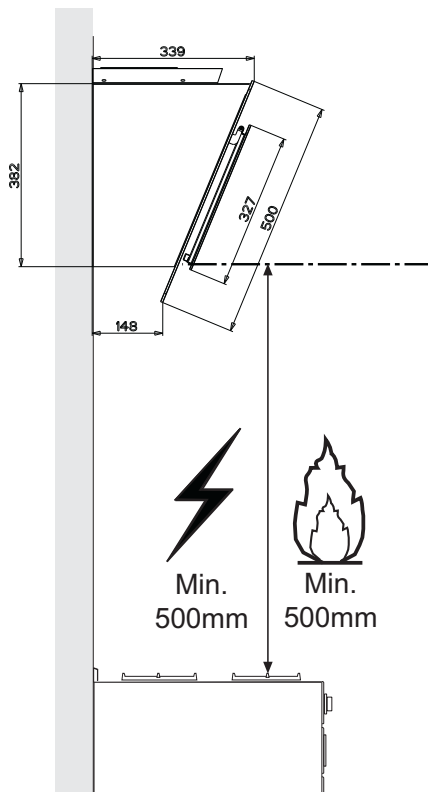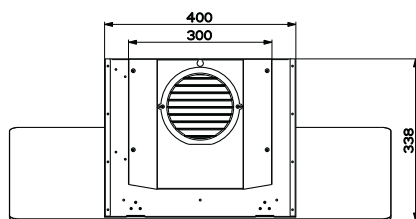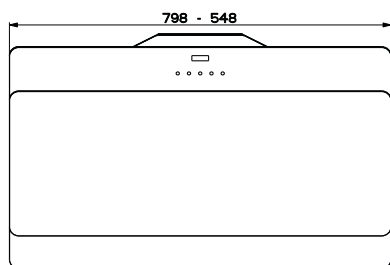

## Seinän poraus ja tukien kiinnittäminen

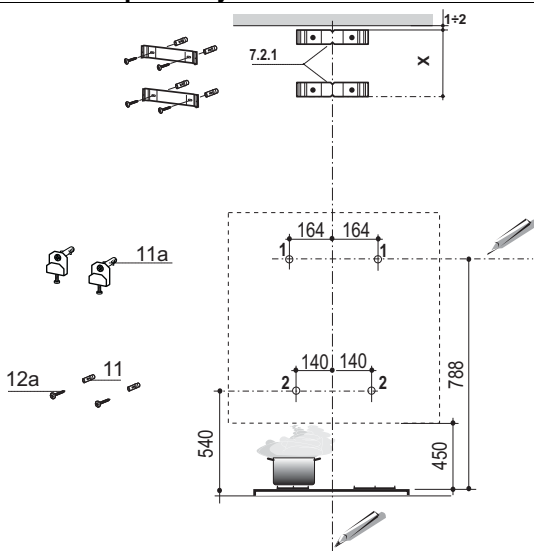

Merkitse seinälle:


- pystysuora viiva kattoon tai ylärajaan saakka liesituulettimen asennusalueen keskikohdalle,
- vaakasuora viiva vähintään 788 mm keittotason yläpuolelle.
- Merkitse vaakasuoralle viivalle piste **(1)**, 164 mm pystysuoran viitelinjan oikealle puolelle.
- Toista toimenpide toiselle puolelle ja tarkista, että ne ovat samalla tasolla.
- Merkitse ohjeiden mukaisesti viitepiste **(2)** 140 mm pystysuorasta viitelinjasta ja 540 mm keittotason yläpuolelle.
- Toista toimenpide toiselle puolelle ja tarkista, että ne ovat samalla tasolla.
- Poraa merkittyihin kohtiin **(1)** reiät  $\varnothing$  12 mm.
- Poraa merkittyihin kohtiin **(2)** reiät  $\varnothing$  8 mm.
- Aseta reikiin **(1)** tulpat ja tuki **11a**, ruuvaa kiinni.
- Laita tulppa **11** reikiin **(2)**.

### Asennus koristehormilla: (Lisävaruste)

- Aseta tuki **7.2.1** kuten kuvassa 1-2 mm katosta tai ylärajasta niin että sen keskikohta (kolot) on pystysuoran viitelinjan kohdalla.
- Merkitse tuen reikien keskipisteet.
- Aseta tuki **7.2.1** kuten kuvassa X mm ensimmäisen tuen alapuolelle (X = toimitetun ylähormin korkeus), niin että sen keskikohta (kolot) on pystysuoran viitelinjan kohdalla.
- Merkitse tuen reikien keskipisteet.
- Poraa merkittyihin kohtiin reiät  $\varnothing$  8 mm.
- Laita reikiin tulpat **11**.
- Kiinnitä tuet toimitetuilla ruuveilla **12a** (4,2 x 44,4 ).

## Liesituulettimen rungon kokoaminen

- Avaa ovi/ovet (Katso kappaletta paneelien avaaminen).
- Poista rasvasuodattimet kahvojen avulla.
- Säädä kaksi ruuvia **Vr** tuessa **11a** liikkeen alkuun.
- Kiinnitä liesituulettimen runko kahteen tukeen **11a**.
- Tasapainota liesituulettimen runko sisäpuolelta ruuveilla **Vr**.
- Ruuvaa kiinni turvaruuvi **12a**.
- Sulje ovi/ovet.

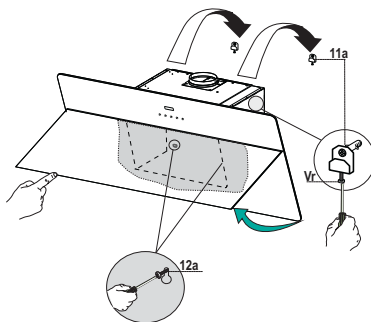


## Ilmanpoistoputket

### HORMILIITÄNTÄINEN MALLI

Tämä malli asennetaan liittämällä koneisto hormiin oman valintasi mukaan  $\varnothing 160$  tai  $125$  mm putkella.



- Asentaaksesi  $\varnothing 125$  mm ilmanvaihtoputken asenna supistusputki **9** koneiston poistoilma-aukon päälle.
- Asenna ilmanpoistoputki riittävällä määrällä putkenkiinnittimiä (eivät sisälly toimitukseen).
- Poista mahdolliset aktiivihillisuodattimet.

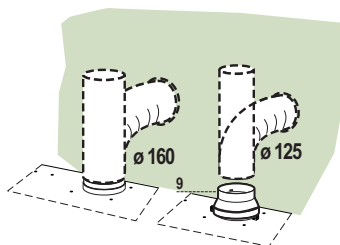

## Suodatusversion ilman ulostulo


Suodatusversion asentamista varten on hankittava lisävarustesarja Aktiivihiihisuodatin.

- Ruuvaa suodatuskansi ilman ulostuloon neljällä ruuvilla **12c** (2,9 x 6,5).
- Kiinnitä suuntausritilä **8** ulostuloon kahdella toimitetulla ruuvilla **12d** (2,9 x 9,5).

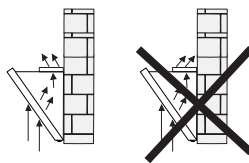

## SÄHKÖLIITÄNTÄ

- Liitä liesituuletin sähköverkkoon turvakytkimen kautta, jonka kontaktien väli on ainakin 3 mm.
- Poista rasvasuodattimet (katso kappaletta “Huolto”) ja varmista, että virtajohdon liitin on kunnolla kiinni imu-laitteessa

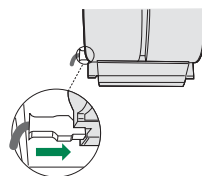

## Hormin kokoaminen

Hormi voidaan asentaa vain liesituulettimen imuversioon.



- Kiinnitä kulmaosa **15** liesituulettimen runkoon toimitetuilla ruuveilla **12d** (2,9 x 9,5).

### Ylähormi

- Levitä sivureunoja hieman, kiinnitä ne tukien **7.2.1** taakse ja sulje ne paikalleen.
- Kiinnitä tuet sivuilta 4 toimitetulla ruuvilla **12c** (2,9 x 6,5).

### Alahormi

- Levitä hormin sivureunoja hieman, kiinnitä ne ylähormin ja seinän väliin ja sulje ne paikalleen.
- Kiinnitä alaosa sivuilta liesituulettimen runkoon 2 toimitetulla ruuvilla **12c** (2,9 x 6,5).

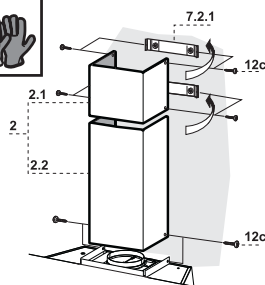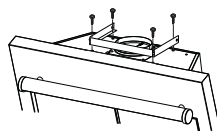

## Käyttöpaneeli

**T1**



**T2**



**1**

**T3**



**2**

**T4**



**3**


**L**



| Painike   | Toiminto                                                                                                                                                                      |                                                               |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------|
| <b>T1</b> | Sammuttaa moottorin                                                                                                                                                           | -                                                             |
| <b>T2</b> | Käynnistää moottorin ensimmäisellä nopeudella                                                                                                                                 | Painikkeet <b>T1+T2</b> palavat.                              |
| <b>T3</b> | Käynnistää moottorin toisella nopeudella                                                                                                                                      | Painikkeet <b>T1+T3</b> palavat.                              |
|           | Kun painiketta painetaan 2 sekunnin ajan, käynnistyy 30 minuuttia viivästetty sammutus (moottori+valot). Käyttönopeutta on mahdollista vaihtaa toiminnon ollessa aktiivisena. | Vastaavat painikkeet <b>T1+ (T2 tai T3 tai T4)</b> vilkkuvat. |
| <b>T4</b> | Käynnistää moottorin kolmannella nopeudella                                                                                                                                   | Painikkeet <b>T1+T4</b> palavat.                              |
|           | Kun painiketta painetaan 2 sekunnin ajan, aktivoituu tehonopeus, joka toimii 10 minuuttia. Ajastetun ajan päätyttyä nopeus palaa asetettuun arvoon.                           | Painike vilkkuu.                                              |
| <b>L</b>  | Sytyttää ja sammuttaa valaistuksen suurimmalla teholla.                                                                                                                       | Painikkeen valo palaa                                         |
|           | Kun painiketta painetaan 2 sekunnin ajan, sytyttää ja sammuttaa pienitehoisen valaistuksen.                                                                                   | Painikkeen valo palaa                                         |

## Paneelin avaaminen


- Vedä paneeli auki.
- Paneeli lukittuu kohtaan, johon se sijoitetaan.
- Puhdista se ulkopuolelta kostealla liinalla ja neutraalilla pesunesteellä.
- Puhdista se myös sisäpuolelta kostealla liinalla ja neutraalilla pesuaineella, älä käytä märkiä liinoja tai sieniä äläkä vesisuihkua. Älä käytä hankaavia aineita.

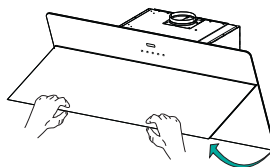

## Rasvasuodattimet

### METALLISTEN RASVASUODATTIMIEN PUHDISTUS

- Suodattimet voidaan pestä myös astianpesukoneessa. On suositeltavaa pestä ne joka toinen kuukausi. Jos tuulettimen käyttö on erikoisen runsasta, suositellaan suodattimien pesua useammin.
- Avaa Comfort Panel -osat vetämällä niitä kevyesti ulospäin.
- Poista suodattimet yksi kerrallaan painamalla suodatinta taaksepäin ja samanaikaisesti alaspäin vetämällä.
- Pese suodattimet. Vältä niiden taivutusta. Anna niiden kuivua ennen uudelleen asennusta. (Mahdollinen suodattimen ulkopinnan värinmuutos ajan kuluessa ei vaikuta suodattimen tehokkuuteen.)
- Asenna suodattimet uudelleen paikoilleen. Varmista, että suodattimien poistokahva jää ulkopuolelle näkyviin.
- Sulje Comfort Panel -osat.

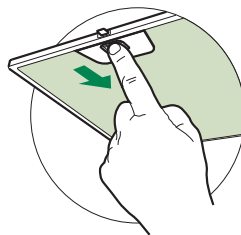

## Aktiivihiiლისუოდatin (Suodatinversio)


Suodattimia ei voi pestä eikä uudistaa, vaan ne täytyy vaihtaa vähintään neljän kuukauden välein tai useammin, mikäli laitetta käytetään paljon

### AKTIIVIHIIლისუODATTIMEN VAIHTAMINEN

- Avaa Comfort Panel vetämällä niitä kevyesti ulospäin.
- Irrota metalliset rasvasuodattimet.
- Irrota vanhat aktiivihiiლისუodattimet kuten kuvassa (A).
- Asenna uudet suodattimet paikalleen kuten kuvassa (B)

**Art.** 90254 Hiiლისუodatin HS-29

- Laita metalliset rasvasuodattimet paikoilleen.
- Sulje Comfort Panel.

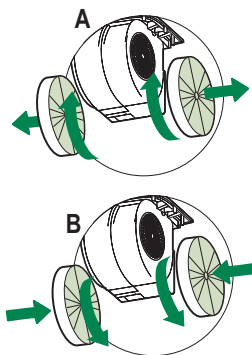

## Valaistus

### LAMPUNVAIHTO

#### 20 W:n halogeenilamppu (G4 Kanta)

- Poista metallinen lasisuojaanpidin vetäen renkaan alta ja samalla tukien sitä kädellä.
- Irrota lamppu lampunpitimestä.
- Vaihda lamppu uuteen samanlaiseen. Huomioi pistokkeen virheetön asennus sille tarkoitetulle paikalle lampunpitimessä.
- Aseta painettava lasisuojaanpidin uudelleen paikoilleen.

