




BONNETS, RED COPPER FLARE
 (Used with flare NUT to cap and close any flare fittings)

B1-04	For 1/4" flare
B1-06	For 3/8" flare
B1-08	For 1/2" flare
B1-10	For 5/8" flare
B1-12	For 3/4" flare



GASKETS, RED COPPER FLARE
 (Put in between brass to brass or to steel or to copper for high sealing)

B2-03	For 3/16" flare
B2-04	For 1/4" flare
B2-05	For 5/16" flare
B2-06	For 3/8" flare
B2-08	For 1/2" flare
B2-10	For 5/8" flare
B2-12	For 3/4" flare

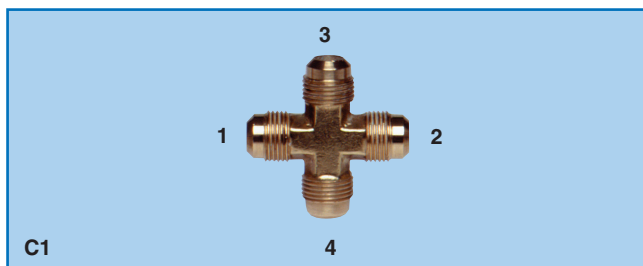


CROSS, 4 x MALE FLARE

C1-04	1/4" MFL
C1-06	3/8" MFL




90° ELBOWS, MALE FLARE x MALE PIPE

E1-03A	3/16" MFL	x	1/8" MPT
E1-04A	1/4" MFL	x	1/8" MPT
E1-04B	1/4" MFL	x	1/4" MPT
E1-04C	1/4" MFL	x	3/8" MPT
E1-05B	5/16" MFL	x	1/4" MPT
E1-06A	3/8" MFL	x	1/8" MPT
E1-06B	3/8" MFL	x	1/4" MPT
E1-06C	3/8" MFL	x	3/8" MPT
E1-06D	3/8" MFL	x	1/2" MPT
E1-08B	1/2" MFL	x	1/4" MPT
E1-08C	1/2" MFL	x	3/8" MPT
E1-08D	1/2" MFL	x	1/2" MPT
E1-08E	1/2" MFL	x	3/4" MPT
E1-10C	5/8" MFL	x	3/8" MPT
E1-10D	5/8" MFL	x	1/2" MPT
E1-10E	5/8" MFL	x	3/4" MPT
E1-12D	3/4" MFL	x	1/2" MPT
E1-12E	3/4" MFL	x	3/4" MPT

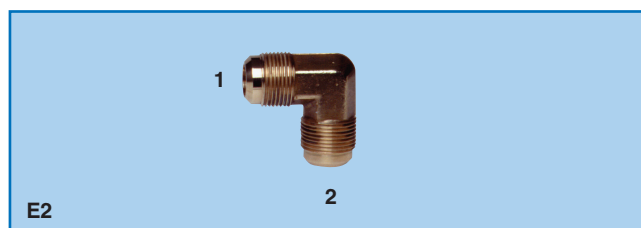

90° ELBOWS, 2 x MALE FLARE

E2-04	1/4" MFL	x	1/4" MFL
E2-06	3/8" MFL	x	3/8" MFL
E2-08	1/2" MFL	x	1/2" MFL
E2-10	5/8" MFL	x	5/8" MFL
E2-12	3/4" MFL	x	3/4" MFL

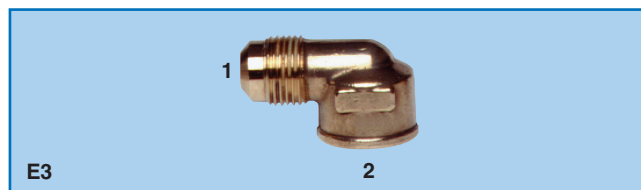

90° ELBOWS, MALE FLARE x FEMALE PIPE

E3-04A	1/4" MFL	x	1/8" FPT
E3-04B	1/4" MFL	x	1/4" FPT
E3-06A	3/8" MFL	x	1/8" FPT
E3-06B	3/8" MFL	x	1/4" FPT
E3-06C	3/8" MFL	x	3/8" FPT
E3-06D	3/8" MFL	x	1/2" FPT
E3-08C	1/2" MFL	x	3/8" FPT
E3-08D	1/2" MFL	x	1/2" FPT
E3-10D	5/8" MFL	x	1/2" FPT