

Technical Manual

Movement detector



MD-F-1.0.1...

1	Notes on the instruction manual	3
2	Safety	4
2.1	Used symbols	4
2.2	Intended use	5
2.3	Improper use	5
2.4	Target group / qualification of personnel	5
2.5	Safety instructions	6
3	Information on protection of the environment	7
4	Product description	8
4.1	Scope of supply	8
4.2	Type overview	9
4.3	Function overview	9
4.4	Device overview of movement detector	9
5	Technical data	10
5.1	Main overview	10
5.2	Dimensions	10
5.3	Circuit diagrams	11
5.4	Detection range	11
6	Mounting	12
6.1	Planning instructions	12
6.2	Safety instructions for mounting	12
6.3	Mounting / Installation	13
7	Commissioning	14
7.1	Allocation of devices and specifying channels	14
7.2	Setting options per channel	18
7.3	Linking	19
8	Updating options	21
9	Operation	22
10	Maintenance	23
10.1	Cleaning	23

1 Notes on the instruction manual

Please read this manual through carefully and adhere to the information contained therein. This will assist you in preventing damage to persons and property and ensure reliable operation and long service life of the device.

Please keep this manual in a safe place.

If you pass the device on, also include this manual.

Busch-Jaeger accepts no liability for failure to observe the instructions in this manual.

If you require additional information or have questions about the device, please contact Busch-Jaeger or visit our Internet site at:

www.BUSCH-JAEGER.com

www.abb.com/freeathome

2 Safety

The device has been constructed according to the latest valid regulations governing technology and is operationally reliable. It has been tested and left the factory in a technically safe and reliable state.

However, residual hazards remain. Read and adhere to the safety instructions to prevent such hazards.

Busch-Jaeger accepts no liability for failure to observe the safety instructions.

2.1 Used symbols

The following symbols point to dangers involved in the use of the device and provide practical instructions.



Warning

This symbol in connection with the signal word "Warning" indicates a dangerous situation which could lead to immediate death or to serious injury.



Attention - damage to property

This symbol indicates a possibly damaging situation for the product. Non-observance can lead to damage or destruction of the product.



Note...

This symbol indicates information or references to additional useful topics. This is not a signal word for a dangerous situation.



This symbol indicates information on the protection of the environment.

The following symbols are used in the manual to draw attention to special dangers:



This symbol indicates a dangerous situation due to electric current. If such a sign is ignored, it can lead to serious injuries or even death.

2.2 Intended use

This device is a movement detector for decentralized flush-mounted installation.

The device is intended for the following:

- » operation according to the listed technical data,
- » installation in dry interior rooms and suitable flush-mounted boxes,
- » use with the connecting options available on the device.

The intended use also includes adherence to all specifications in this manual.

2.3 Improper use

Each use not listed in chapter 2.2 is deemed improper use and can lead to personal injury and damage to property.

Busch-Jaeger is not liable for damages caused by use deemed contrary to the intended use of the device. The associated risk is borne exclusively by the user/operator.

The device is not intended for the following:

- » unauthorized structural changes,
- » repairs,
- » use outdoors or in bathroom areas,
- » use with an additional bus coupler
- » as substitute for an alarm system.

2.4 Target group / qualification of personnel

Installation, commissioning and maintenance of the device must only be carried out by trained and properly qualified electrical installers.

The electrical installers must have read and understood the manual and follow the instructions provided.

The electrical installers must adhere to the valid national regulations in their country governing the installation, functional test, repair and maintenance of electrical products.

The electrical installers must be familiar with and correctly apply the "Five safety regulations" (DIN VDE 0105, EN 50110):

1. Disconnect from power;
2. Secure against being re-connected;
3. Ensure there is no voltage;
4. Connect to earth and short-circuit;
5. Cover or barricade adjacent live parts.

2.5 Safety instructions



Warning

Electric voltage! Risk of death and fire due to electrical voltage of 230 V.

Dangerous currents flow through the body when coming into direct or indirect contact with live components. This can result in electric shock, burns or even death.

- » Work on the 230 V supply system may only be performed by authorised and qualified electricians.
- » Disconnect the mains power supply before installation / disassembly.
- » Never use the device with damaged connecting cables.
- » Do not open covers firmly bolted to the housing of the device.
- » Use the device only in a technically faultless state.
- » Do not make changes to or perform repairs on the device, on its components or its accessories.
- » Keep the device away from water and wet surroundings.



Attention - damage to property

Risk of damaging the device due to external factors.

Moisture and contamination can damage or destroy the device.

- » Protect the device against humidity, dirt and damage during transport, storage and operation.

3 Information on protection of the environment

All packaging materials and devices bear the markings and test seals for proper disposal.

The products meet the legal requirements, in particular the laws governing electronic and electrical devices and the REACH ordinance (EU Directive 2002/96/EG WEEE and 2002/95/EG RoHS), (EU-REACH Directive and Law for the Execution of the Directive (EG) No.1907/2006).



The device contains valuable raw materials which can be recycled. Used electric and electronic devices must not be disposed of with domestic waste.

- » Always dispose of the packaging material and electric devices and their components via the authorized collecting depots and disposal companies.

4 Product description

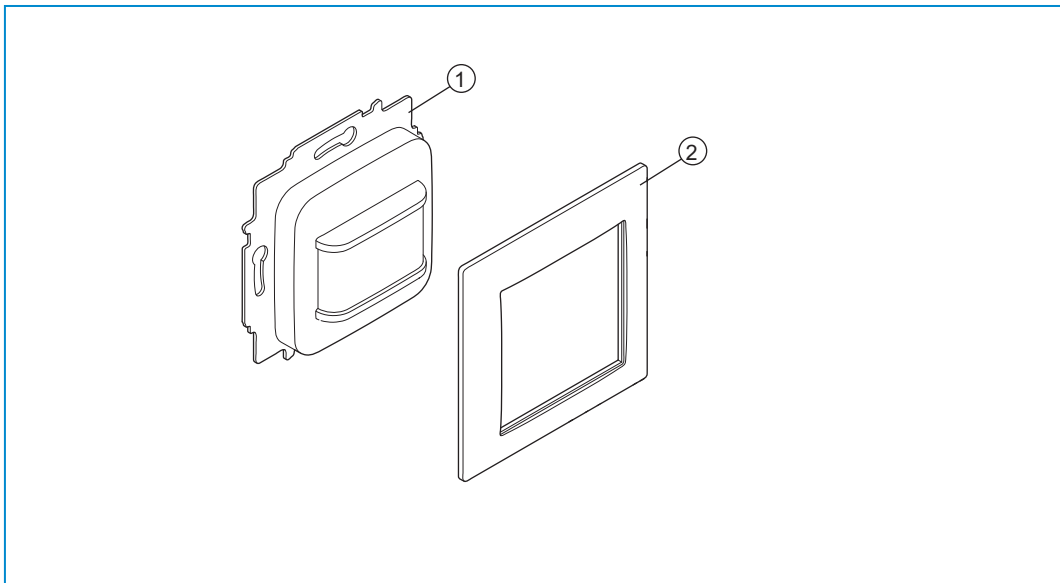


Fig. 1: Product overview

- [1] Flush-mounted insert (with integrated cover)
- [2] Cover frame (not included in scope of delivery)

The movement detector sensor (with bus coupler) can be assigned to an available switch actuator. The devices respond to moving body heat and switch on the lights. They have not been pre-programmed. The devices do not serve as a substitute for an alarm system.

The sensor is integrated in a flush-mounted insert [1].

The integrated bus coupler makes possible the connection to the free@home bus line.

4.1 Scope of supply

The scope of supply only contains the flush-mounted insert [1], including the pre-mounted cover. It must still be completed with a suitable cover frame [2].



Note ...

Additional information about the cover frame ranges is available in the electronic catalogue (www.busch-jaeger-catalogue.com).

4.2 Type overview

Article no.	Product name	Sensor channels	
MD-F-1.0.1...	Movement detector	1	

Table 1: Overview of types

4.3 Function overview

The following table provides an overview of the possible functions and applications of the device:

Icon of the operating surface	Information
	Name: Movement detector Type: Sensor Made available by: Movement detector Function: Sensor for movement- and brightness-dependent control of free@home functions

Table 2: Function overview

4.4 Device overview of movement detector

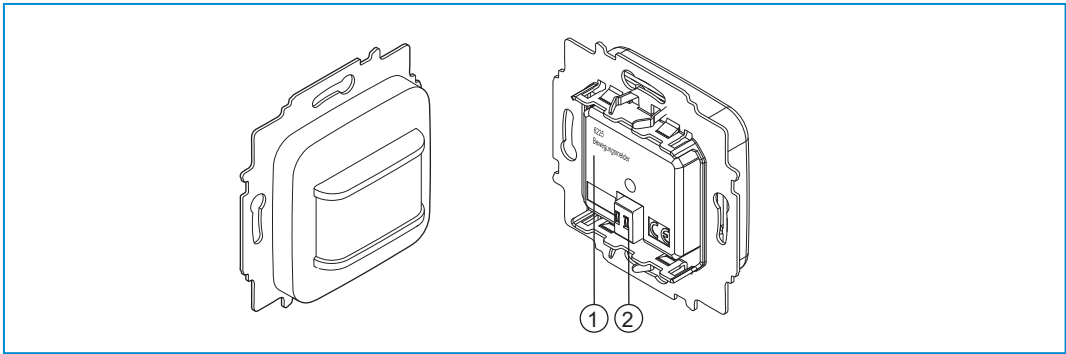


Fig. 2: Device overview of movement detector

- [1] Type plate
- [2] Bus connection terminal

5 Technical data

5.1 Main overview

Parameters	Value
Power Supply	24 V DC (via bus line)
Bus subscribers	1 (12mA)
Connection	Bus connection terminal: 0.4-0.8 mm
Line type	J-Y(St)Y, 2 x 2x 0.8 mm
Wire stripping	6-7 mm
Opening angle	180 °
Brightness limit value	1 – 500 lux
Mounting height	1.1 m to 1.3 m
Protection	IP20
Ambient temperature	-5 °C – +45 °C
Storage T°	-20 °C – +70 °C

Table 3: Technical data

5.2 Dimensions



Note...

All dimensions are specified in mm. All device types listed in this manual have the same dimensions.

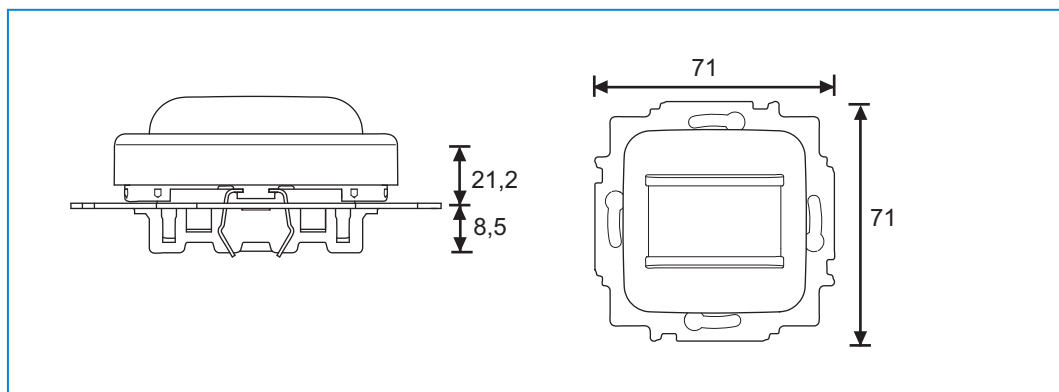


Fig. 3: Dimensions

5.3 Circuit diagrams

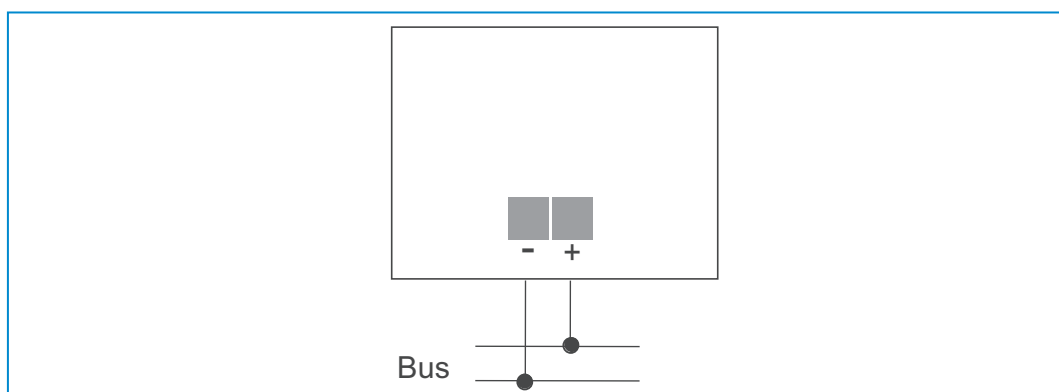


Fig. 4: Electrical connection

5.4 Detection range

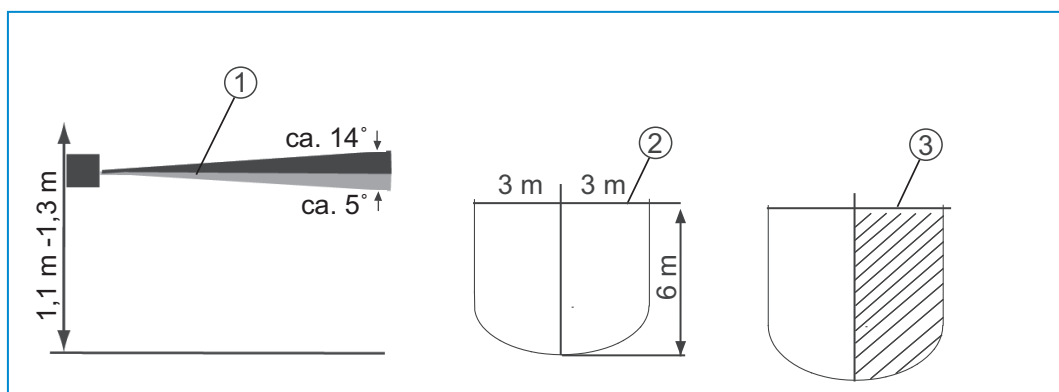


Fig. 5: Detection range

- [1] Mounting heights / Detection levels;
- [2] Detection range (0 °C – + 36 °C);
- [3] Horizontal reduction of the detection range by masking

6 Mounting

6.1 Planning instructions



Note...

Planning and application instructions for the system are available in the free@home system manual. They can be downloaded at www.abb.com/freeathome.

6.2 Safety instructions for mounting



Warning - Risk of death due to electrical voltage

Dangerous currents flow through the body when coming into direct or indirect contact with live components. This results in electric shock, burns or even death.

Work improperly carried out on electrical systems is a hazard to one's own life and that of the user. Also fires and serious damage to property can result.


- » Install the device only if you have the necessary electrical engineering knowledge and experience (see chapter 2.4).
- » Use suitable personal protective clothing.
- » Use suitable tools and measuring devices.
- » Check the supply network type (TN system, IT system, TT system) to secure the following power supply conditions (classic connection to ground, protective earthing, necessary additional measures, etc.).
- » Observe the correct polarity.

6.3 Mounting / Installation




Note...


The devices with integrated bus coupler have been prepared for installing in flush-mounted boxes in connection with the corresponding mounting plate. The device insert has already been inserted in the mounting plate.

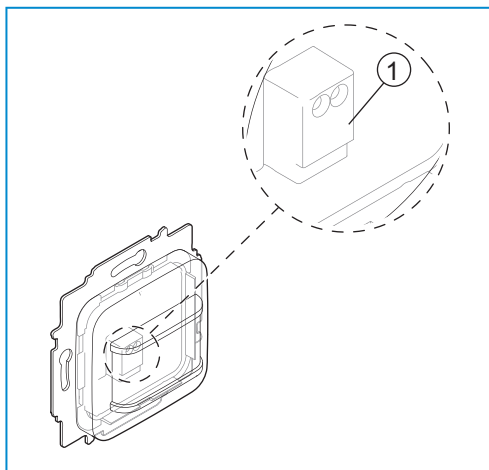

- » Turn the device into the correct installation position.
- The bus connection terminal [1] must be at the bottom.

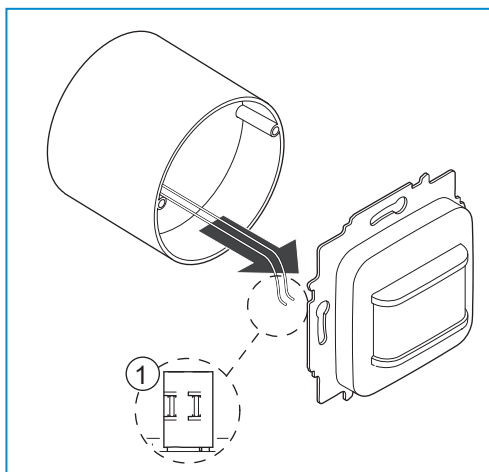

- » Connect the free@home bus line with the bus connection terminal [1].
Observe the correct polarity!

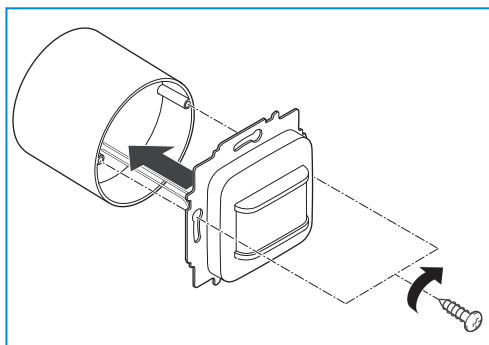

- » Insert the device into the flush-mounted box and screw it on.

7 Commissioning

Commissioning is always carried out via the Web-based surface of the System Access Point.

The System Access Point establishes the connection between the free@home participants and the smartphone, tablet or PC. It is used to identify and program the participants during commissioning.

Devices which are physically connected to the free@home bus, log themselves automatically into the System Access Point. They transmit information about their type and supported functions (see Table 2, chapter 4.3).

During initial commissioning all devices are given a generic name (e.g. movement detector1, etc.). The user must change this name to a name practical for the system (Example: "Movement detector living room light" for a movement detector that controls the living room light).

The devices must be parameterised for the use of additional functions.

Commissioning of the movement detectors is described in the following chapters. Here it is assumed that the basic commissioning steps of the overall system have already been carried out. General knowledge about the Web-based commissioning software of the System Access Point is assumed.




Note ...

General information about commissioning and parameterization is available in the technical reference manual and the online Help of the "System Access Point".

7.1 Allocation of devices and specifying channels

The devices connected to the system must be identified, i.e. they are allocated to a room according to their function and are given a descriptive name.



The allocation is made via the allocation function of the Web-based user interface of the System Access Point.

7.1.1 Adding device

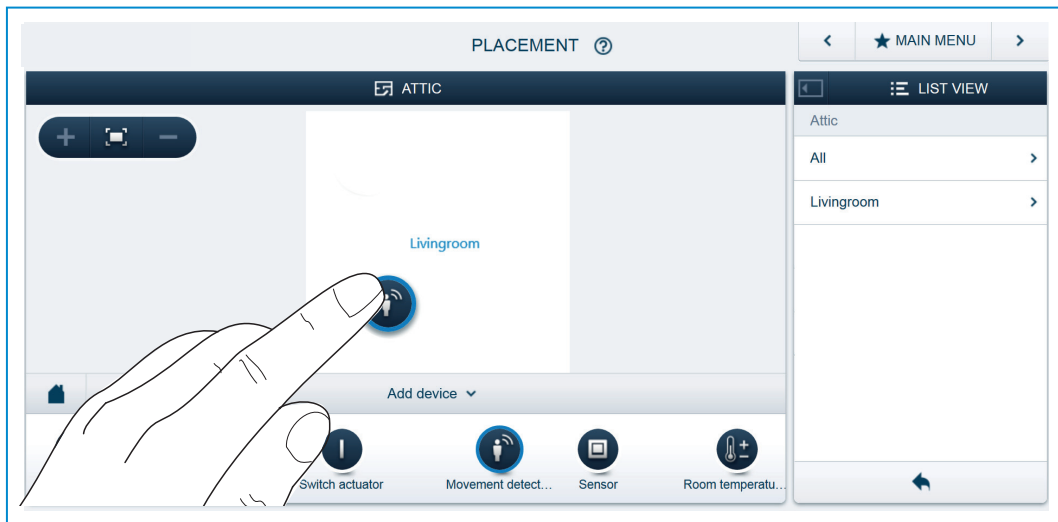


Fig. 6: Adding device

- » In the "Add device" bar select the desired application and pull it via drag-and-drop onto the floor plan in the working area.

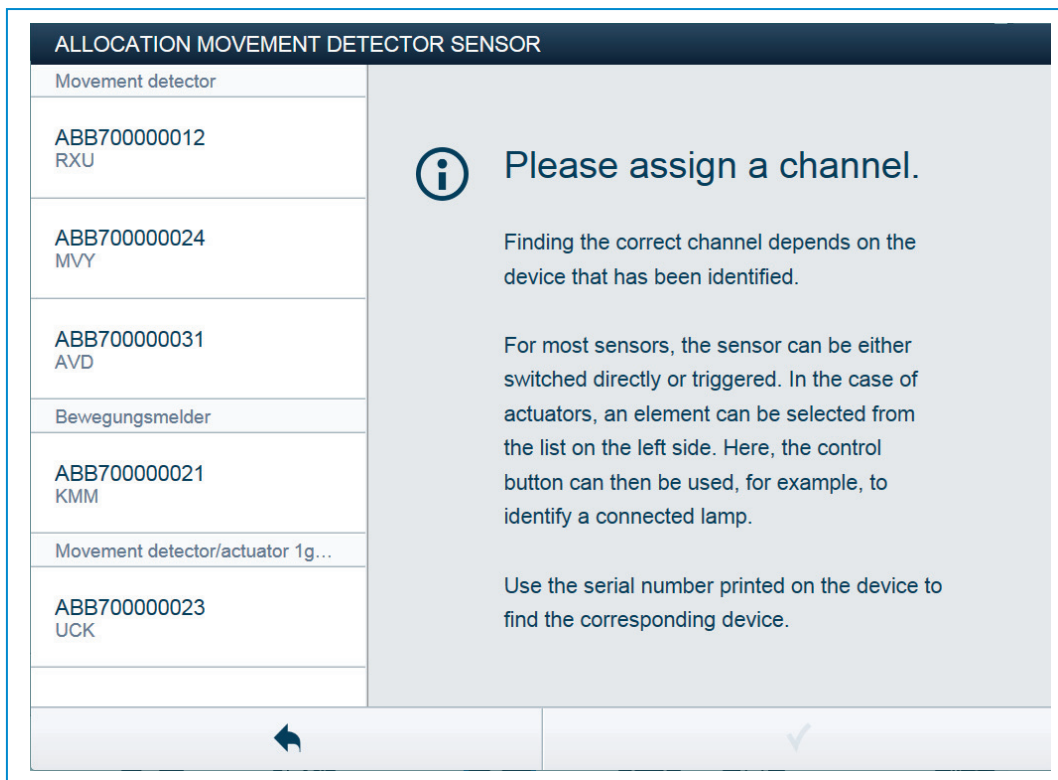


Fig. 7: Allocation

- A pop-up window opens automatically which lists all the devices suitable for the application selected.

Identification via serial number

ALLOCATION MOVEMENT D			
Movement detector			
ABB700000012 RXU		Movem.detect.flushm.	
			
ABB700000024 MVY			
			
ABB700000031 AVD			

Fig. 8 Identification via serial number

- » Compare the short 3-digit number of the identity label, which should be glued to the device plan, with the numbers in the list and in this way identify the device you are searching for and, if necessary, also the channel.

Assigning a name

ALLOCATION MOVEMENT DETECTOR SENSOR		
Movement detector/actuator 1g...		
ABB700000008 PET	Sensor	
	Floor	Attic
	Room	Livingroom
ABB700000010 GAK	Name	Movement detector
	Serial number	ABB700000012
ABB700000026 WNX	Short ID	RXU
Movement detector		
ABB700000012 RXU	Sensor  Movement Detec...	
Bewegungsmelder/Schaltaktor ...		
ABB700000024 MVY	Name Movement detec	
		

Fig. 9: Assigning a name

- » Enter a name that is easy to understand and under which the application is to be displayed later (e.g. "Movement detector living room").
- » Press the tick at the bottom right to take over the entry.




Note ...

The settings of the device can be adjusted via the Web-based user interface of the System Access Point.

These settings, however, can only be made in part with a fitter access (see online Help of the System Access Point). The parameter settings remain as described above.

7.2 Setting options per channel

General settings and special parameter settings can be made for each channel.



The settings are made via the allocation function of the Web-based user interface of the System Access Point.

Device selection

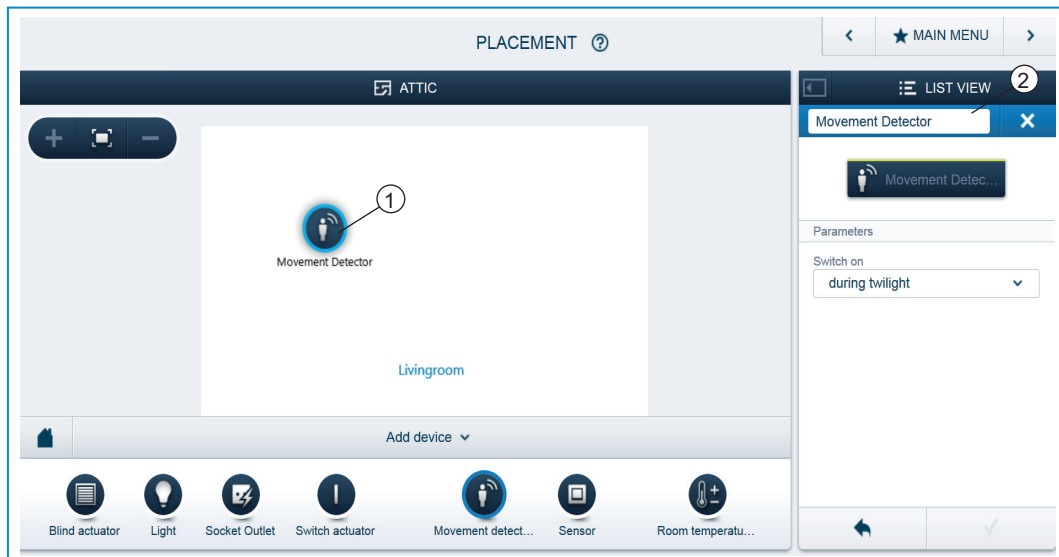



Fig. 10: Device selection

- » Select the device icon [1] in the floor plan of the working area view.
- All setting options for the respective channel are displayed in the list view [2].
For rockers (sensors) the corresponding rocker must be selected.

The following settings are available.

7.2.1 Settings for movement detector


Sensor settings (movement detector settings)

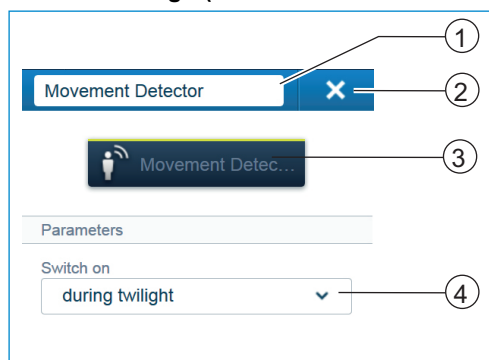

- [1] Changing the name
- [2] Deleting the channel via 'X'
- [3] Switching of the actuator via the button
- [4] Switch-on behavior:
Selection of the brightness conditions at which the device is to respond.

7.3 Linking

The movement detectors and actuators created via the allocation function can now be linked with each other.

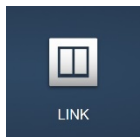

The linking in the list view is then made via the linking function of the Web-based user interface of the System Access Point.

Connecting actuator and sensor

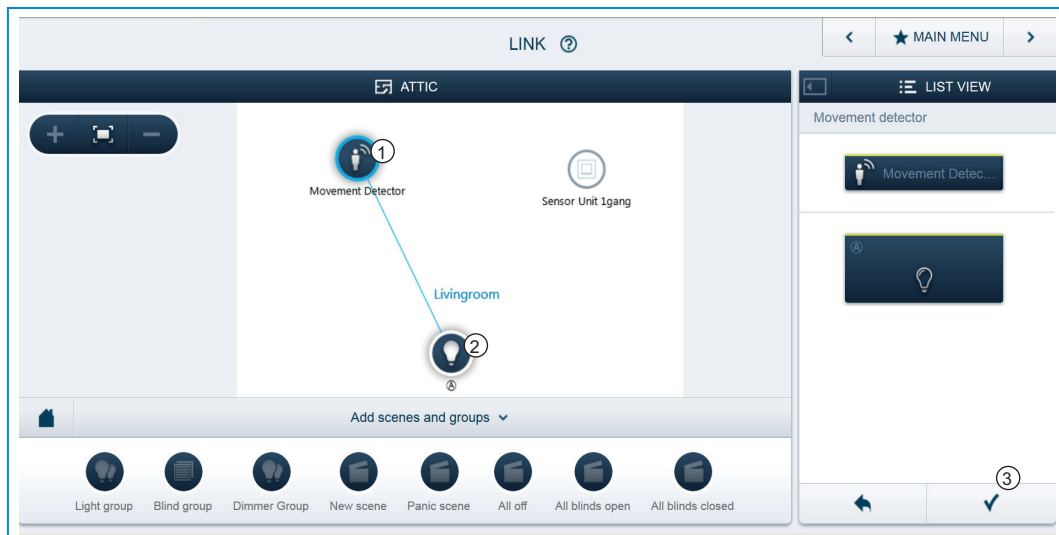


Fig. 11: Connecting actuator and sensor

- » To connect an actuator with a sensor, first click on the desired sensor [1] which is to operate the actuator and then on the actuator [2].
- » Press the tick [3] at the bottom right to take over the entry.
- A blue connecting line indicates the link between the two devices. The configuration is now transmitted automatically to the devices. The transmission can (depending on the number of affected devices) take a number of seconds. During the transmission a progress bar is displayed around the devices affected.

Connecting an actuator with an additional sensor

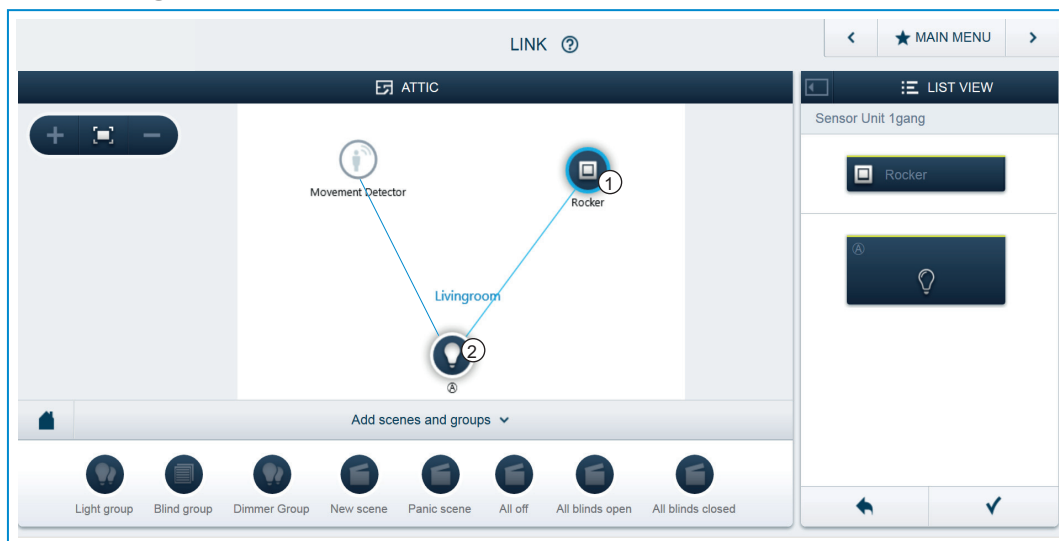


Fig. 12: Connecting actuator and sensor

- » To connect the actuator with an additional sensor, first click on the second desired sensor [1] which is to operate the actuator and then on the actuator [2].
- An additional blue connecting line appears between the second sensor and the actuator.
- After the transmission has been completed the sensor can be operated directly locally.

8 Updating options

A Firmware update is carried out via the Web-based user interface of the System Access Point.

9 Operation

The devices respond to moving body heat and switch on the connected actuators.
Action by the user is therefore not necessary.

10 Maintenance

The unit is maintenance-free. In case of damage (e.g., during transport or storage), do not perform repairs. Once the device is opened, the warranty is void!

Access to the device must be guaranteed for operation, testing, inspection, maintenance and repairs (according to DIN VDE 0100-520).

10.1 Cleaning

Dirty units can be cleaned with a dry cloth. If this is not sufficient, a cloth slightly moistened with a soap solution can be used. Caustic cleaning agents or solvents must not be used.

A member of the ABB Group

Busch-Jaeger Elektro GmbH
PO Box
58505 Lüdenscheid

Freisenbergstraße 2
58513 Lüdenscheid

www.BUSCH-JAEGER.com
info.bje@de.abb.com

Central sales service:
Tel.: +49 2351 956-1600
Fax: +49 2351 956-1700

Note

We reserve the right to at all times make technical changes as well as changes to the contents of this document without prior notice. The detailed specifications agreed upon apply for orders. ABB accepts no responsibility for possible errors or incompleteness in this document.

We reserve all rights to this document and the topics and illustrations contained therein. The document and its contents, or extracts thereof, must not be reproduced, transmitted or reused by third parties without prior written consent by ABB.

Copyright© 2014 Busch-Jaeger
Elektro GmbH
All rights reserved